

User's Guide for PMM6081 M2000/M6000 DB100-6

delResearch LLC

Document Ver	sions			
Version	Purpose	Author	Sw Ver	Date
1.01	Initial draft	Jim DellaMorte		9/28/2018
1.02	Updated Document SSB	John DellaMorte		2/2/2019
1.03	Added many new commands	John DellaMorte		1/15/2020
1.04	Fixed page numbers	John DellaMorte		2/26/2020
1.05	Added commands	John DellaMorte	2.06	5/28/2020
1.06	Added commands	J DellaMorte	2.2x	9/21/2020
1.07	Added commands	J DellaMorte	2.7x	3/8/2021
1.10	Major Overhaul of document	J DellaMorte	2.7x	4/28/2021
1.20	Add Interface board and Battery Mux	J DellaMorte	3.x	9/2022
1.30	Add PMM6081 and wave file record	J DellaMorte	3.x	1/2024



Contents

1	Get	ting S	tarted	17
	1.1	Introd	duction	17
	1.2	Delive	ery Options	17
		1.2.1	OEM Boardset	17
		1.2.2	Lab Evaluation Platform	17
		1.2.3	Enclosed Modem	17
		1.2.4	Deckbox	17
	1.3	Requi	ired equipment	18
	1.4	Bencl	h Testing	18
		1.4.1	What is an Air Test	18
		1.4.2	RS-422 UART connection	18
		1.4.3	Running the application	19
		1.4.4	Checking the version number	19
		1.4.5		20
		1.4.6	Sending a Test Message	20
		1.4.7	Sending an Arbitrary Message	20
		1.4.8	Addressing a particular modem	20
		1.4.9	Setting the data Rate of the Payload	21
		1.4.10	Telnet Chat Operation	22
		1.4.11	Sending a Range Command	23
	051	4 54		25
2		M Mod		25
	2.1		Modem System	
		2.1.1	Analog Board	
		2.1.2	Digital Board	
		2.1.3	micro SD Card	
		2.1.4	Heat Sink/Mounting Tray	27
3	Lab	Evalu	ation Platform	29
	3.1	Introd	duction	29
	3.2	What	's in the Box	29
	3.3	Setup	Overview	29
4	DD:	100 D-	eckbox	31
4			ription	
	4.1			
	4.2		box Models	32 32
	4.0	TJUITIK	JING Hansaucel	/



	4.4	Front Panel connections	
		4.4.2 Transducer Connector Specifications on the DB100 Deck-	52
		box	32
		4.4.3 Models DB100-3, DB100-5, and DB100-5-2	
		4.4.4 Model DB100-6	
		4.4.5 USB	33
		4.4.6 Ethernet	33
		4.4.7 Charging	
		4.4.8 Headphone and Microphone Jack	
	4.5	Single Sideband Voice Feature of the DB100-5-SSB	
	4.6	Getting Started with the DB100	
	4.7		
	4.8	Initial Setup	
		4.8.1 Connecting the Transducer	
		4.8.2 Powering On	
	<i>(</i> 0	4.8.3 Connecting to the Modem	
		Additional Setup for Multiple Units	
	4.10	Care	36
5	Enc	closed Modems	
	M20	000/M6000/S1000	37
	5.1	Enclosed Modems	37
		5.1.1 Popoto M2000	37
		5.1.2 Popoto S1000	37
		5.1.3 Popoto M6000	
	5.2	Connectors	
	5.3	M2000/S1000 Connectors	
		5.3.1 Connector Part Numbers	
		5.3.2 10 Pin Ethernet Option	
		5.3.3 10 Pin RS-422 Option	
		5.3.4 16 Pin Universal Option	
		5.3.5 8 Pin Ethernet Option	
		5.3.6 8 Pin RS-422 Option	
	Г/	5.3.7 8 Pin RS-232 Option	
	5.4 5.5	Types of Lab Cables	
	٥.٥	5.5.1 16-Pin Lab Cable	
		5.5.2 8-Pin Lab Cables for S1000	
		5.5.3 Extension Cables	
	5.6	Power Down and Dummy Plugs	
	5.0	5.6.1 Understanding Power Down Plugs	
		5.6.2 Design and Functionality	
		5.6.3 The Power Down Plug	
	5.7	Charging	
		5.7.1 Using the Popoto Li-ion Battery Charger	
	5.8	Disassembly	
		5.8.1 Recommendation	



		5.8.2	M2000/M6000	45
		5.8.3	S1000	45
6	Por	oto Ti	ransducer (PMT-28)	47
	6.1		ducer	47
			ducer Configurations	
		6.2.1	Internal Wiring Configuration	
		6.2.2	External Wiring Configuration	
		6.2.3	Dunking Transducer	
		6.2.4	Transducer Performance	
	6.3		rmance Curves	
		6.3.1	Free Field Voltage Sensitivity	
		6.3.2		
		6.3.3	Transmit Beam Pattern	
7	Con		icating with Danata	51
	7.1		icating with Popoto duction	
	7.1		et based JSON	
	1.2	7.2.1	Highlevel Description of Popoto API Sockets	
		7.2.1	Introduction JSON Messages	
		7.2.3	_	
		7.2.4	The Keyword Return Values	
		7.2.5	System Level Variables	
	7.3		tating JSON messages	
8	_		onnections	55
	8.1		22 4 wire serial	
		8.1.1	Reasons to use it	
	0.0	8.1.2	Reasons to avoid it	
	8.2		32 Uart	
		0.2	Reasons to use it	55
	0.7		Reasons to avoid it	
	8.3		DBaseT	
			Reasons to Use it	
	0 /		Reasons to avoid it	
	8.4	•	3.3V) UART	
		8.4.1		
	0.5		Reasons to avoid it	
	8.5		es of operations	
		8.5.1	Local pshell	
		8.5.2	Remote pshell	
		8.5.3	Matlab TM	
	0.0		Custom interfaces	
	8.6	Sieep	and Power Down	59



9	Psh	ell	61
	9.1	Modes of operation	
	9.2	Requirements for running	
	9.3	Invoking pshell	
		9.3.1 The pshell.init file	
	0 (9.3.2 Invoking pshell from a linux prompt	
	9.4	Invoking commands	
		9.4.1 Help	
		9.4.3 Commands	
	9.5	Extending the pshell	
	9.6	Scheduling Transmissions	
		9.6.1 Streaming Mode Operation for Popoto Modem	
10	•	gle Side Band ce Operation	67
11	Sind	gle Side Band	
		ce Operation	69
	11.1	Overview	69
	11.2	SSB Transmitter	69
		11.2.1 The ssbtx command	
		11.2.2 Adjustment of transmit power	
		11.2.3 Peak Envelope Power	
		11.2.4 PTT keying of the transmitter	
	11.3	SSB Receiver	
	11.5	11.3.1 Squelch	
		11.3.2 Noise Reduction and AGC	
	11.4		
	11.5	SSB Controllable parameters	
12	Jan	us Operation	73
		Janus Overview	
		Janus Bitstream	
	12.3	Popoto Modem Implementation of Janus	
		12.3.1 Class User Id: 000 Emergency	
		12.3.2 Class User Id: 002 Underwater AIS	
13	Pho	orcys Operation	79
		Phorcys System Configuration	
		13.1.1 Transmission Primitives	
		13.1.2 System Variable Summary	79
		13.1.3 Short-Payload (SP) Waveform Specification	80
		13.1.4 Long-Payload (LP) Waveform Specification	80
		13.1.5 Distinguishing Phorcys from Popoto Modulation on Re-	
		ception	81

83



14 OEM Interface Description

	14.2	Popoto Digital Interface 14.1.1 Overview 14.1.2 PDI Hardware Components 14.1.3 Electrical Connections 14.1.4 Digital Interfaces PMM6081 Specific Interfaces PMM6081 Specific Interfaces 14.3.1 Power 14.3.2 Analog Interfaces 14.3.3 Analog Board	83 85 86 91 91 91
15	Batt	tery Multiplexer	99
	15.1	Battery Multiplexer	
		15.1.1 Overview	
		15.1.3 Charging Connectors	
16	D	esta Interface Board	107
16		poto Interface Board Popoto Interface Board	103 103
	10.1	16.1.1 Overview	
		16.1.2 PDI Connector J10	103
		16.1.3 USB Port (J2)	
		16.1.4 Ethernet Port (J1)	
		16.1.5 Switch SW1 and Jumper J9	
		16.1.7 SSB Connections	
117	I I m or	and dings the Figures are	09
1/		grading the Firmware Introduction	
	17.1	17.1.1 Details on how to update the firmware	
	17.2	Upload Procedure	
	17.3	Updating Image using UUU	
		17.3.1 Updating with fast uuu	113
18	Net	work Settings	115
	18.1	Adjusting Network Settings on Popoto Debian	115
19	Diag	gnostics	117
	19.1	Popoto log	
		19.1.1 Introduction	
		19.1.2 Location	
		19.1.4 MSM Logs	
	19.2	PCM Logging	
		19.2.1 Introduction	
		19.2.2 Socket based PCMLogs	
		19.2.3 Target File based PCM Logs	120



	19 3	19.2.4 Notes	
20			
20			23
		Overview	
		! How to Enable	
	20.3	Logging Details	123
21	Psh	ell Command Reference	25
		Rx	126
		chat	127
		configure	28
		connect	129
		datamode	
		deepsleep	
		disablemsmlog	
		disconnect	
		download	
		enablemsmlog	
		exit	
		getEXP1	
		getIP	
		getPEP	
		getclock	
		getvaluef	
		getvaluei	
		getverbosity	43
		ls	44
		mips	45
		multiping	
		netplay	
		netrec	
		ping	
		playstart	
		playstop	
		powerdown	
		q	
		quit	
		range	
		recordstart1	
		recordstop	157
		remote	158
		setEXPO	159
		setRate10240	160
		setRatel280	
		setRate2560	
		setRate5120	
		setRate640	



	setRate80	165
	setTerminalMode	166
	setcarrier	167
	setcarrier25	168
	setcarrier30	169
	setclock	170
	setgainmode	
	setvaluef	
	setvaluei	
	setverbosity	
	sleep	
	ssb	
	ssbtx	
	startrx	
	transmit	
	transmitJSON	
	transmitJSONFiles	
	unq	
	upload	
	version	184
22 Pc	opoto Variables	185
	APP_CycleCount	
	APP_CycleCountReset	
	APP_ModemSMAOut	
	APP_SocketBasedPCM	
	BBAND_DownCarrier	
	BBAND_OutputScale	
	BBAND_UpCarrier	
	BatteryCharge	
	BatteryCurrent	
	BatteryVoltage	
	Carrier	
	CarrierTxMode	
	ChannellR	
	ConsolePacketBytes	
	ConsoleTimeoutMS	
	DOWNCONVERT_Carrier	
	DepartureDelay_samples	
	DopplerDisable	
	DopplerEnable	
	FHDEMOD_DetectThresholdDB	
	FHDEMOD_HopSeqLen	
	FHMOD_HopSeqLen	
	FHMOD_NumChipReps	
	GainAdjustMode	
	HP FilterEnable	211



Headerless	212
InBandNoiseEnergy	213
InbandEnergy	214
LedEnable	
LocalID	216
LoggingLevel	
MODEM_Enable	
PSK_BnTaps	
PSK_Constellation	
PSK_FnTaps	
PSK_PDSNR	222
PSK_PLL	
PSK_Taps	
PayloadMode	
PeakEnvelopePower	
PlayMode	
RNG_SpeedOfSound	
RNG_TA_DelayMs	
RangeTimeout_mS	
RecordMode	
RemoteID	
ReportErroredBytes	
RxEnable	23/
RxScramblerMode	
SNR	
SSB_Enable	
SSB_NREnable	
SSB_SetPTT	
SSB_SqLevel	
SSB_Txpower	
SSB_UseGPIO	
SSB_Volume	
SSB_VxHang	
SSB_VxLevel	
SSB_VxMode	
SSB_carrier	
SSB_sideband	
SignalEnergy	
StreamingTxLen	
SystemMode	
TCPecho	
Temp_Ambient	
TxChirpMode	254
TxEnable	255
TxPower	
TxPowerWatts	257
TxTimeout_mS	258
LIPCONVERT Carrier	259



	UnitTestMode	261 262 263
	TIPE Commands range ping TIPE Variables echosounder:mode echosounder:carrier echosounder:hfmchirpbw echosounder:timeout echosounder:speedofsound transponder:carrier transponder:detecttonef transponder:detecttonef transponder:respondtonef transponder:respondtonelength transponder:respondtonelength transponder:respondtonelength transponder:respondtonelength transponder:respondtonelength transponder:respondtonelength transponder:respondtonelength transponder:respondtonelength transponder:timeout pinger:mode pinger:carrier pinger:pingtone pinger:tonelength	265 267 268 269 270 271 272 273 274 275 276 277 278 279 280 281 282 283 284
24.1	The Acoustic Message Header	
	pendix B Assembly Drawings	289 289



List of Tables

1.1 1.2	PSK Parameters	
4.1 4.2 4.3	Pin Assignments for DB100-3, DB100-5, and DB100-5-2	33
11.1 11.2 11.3	SSB Control Bits	71
	PHORCYSv0 – Short Payload (SP) waveform specification summary. PHORCYSv0 – Long Payload (LP) waveform specification summary.	
14.2 14.3 14.4 14.5 14.6 14.7 14.8	PDI Components and Part Numbers PDI Electrical Pinout Extended Gigabit PDI Electrical Pinout Popoto TTL UART Parts Popoto 3.3V Uart Port Popoto Expansion Header Parts 0056 Analog Board GPIO Expansion Header PMM6081 Power Plug Components PMM6081 Power Connector Pinout DJ1 High Gain Hydrophone Connector Pinout, AINxP and AINxN are the positive and negative inputs for a given hydrophone chan-	86 87 87 89 89
	nel. J2 Low Gain Hydrophone Connector Pinout, AINxP and AINxN are the positive and negative inputs for a given hydrophone channel.	93
14.13	Manufacturer Part Number for iGrid Pins and Shells	96
15.2	Battery Multiplexer Power In and Out Plug Components	99



16.1	USB Ports	 . 103
16.2	PWRDN LED Connector Pinout	 . 104
16.3	SMA Ports J6 and J7	 . 104
16.4	SSB Control Port J3	 . 104
16.5	Headphone/Microphone Connector J5	 . 105
19.1	PCM Packet Format	 . 119
22.1	Argument List format	 . 185
22.2	Variable Set Return Conditions	 . 185
24.1	Header packet format	 . 287
24.2	! Header Byte 4	 . 288
24.3	Header Byte 5	 . 288
24.4	Modulation Types (Mod Values)	 . 288

List of Figures

1.1 1.2	High Level Popoto Block Diagram	
2.12.22.3	The PMM6081 Analog board	26
4.1	The Popoto DB100 Deckbox	31
5.1	Pin Locations: 10 Pin and 8 Pin Connectors as viewed from the face of the male connector	38
6.1 6.2 6.3 6.4	The Popoto 28 Khz Transducer	49 50
7.1 7.2 7.3 7.4 7.5	Popoto System Overview. Popoto Modem Socket interfaces. JSON API Interfacing to Python. Popoto Modem Matlab and JSON API. Popoto pshell to Popoto.py to JSON.	52 53 54
8.1 8.2 8.3 8.4	Local Pshell operation. Connecting to Popoto using a remote pshell Connecting to Popoto Over Matlab TM . Popoto Modem implementing a custom application. In this picture, a Popoto modem is configured to measure a temperature sensor, and report its measurements via the acoustic channel.	58
12.1	Janus Baseline Bit Aloocation. (from the Januswiki.com webiste)	73
14.1	PDI User-Side Molex Connector. Interfacing to the PDI is accomplished with a Molex Microfit shell P/N 0430251400 and either Pre-pinned jumper wires, or Molex socket crimps.	
	Additional PDI Connection to enable Gigabit Ethernet. PDI Extended Gigabit User-Side Molex Connector. By Adding the 2 additional differential pairs, the Extended Gigabit connector enables gigabit ethernet to the PMM6081.	



	PDI Schematic connections.	85
14.5	Popoto TTL UART Plug. This port allows 3.3V logic-level UART connections	87
14.6	Popoto Expansion Header. This connector allows access to I2C,	0,
	SPI and General purpose I/O from the Popoto Modem	88
14.7	Popoto 0056 Board Expansion Header. This connector allows ac-	
	cess to I2C, and General Purpose I/O (GPIO) from the Popoto Mo-	
	dem	89
14.8	PMM6081 Digital Board Connector Locations	
	PMM6081 Power Schematic.	92
	DPMM6081 Power Connectors and pinout.	92
	The PMM6081 Analog board	94
	The PMM6081 Transducer connector schematic.	95
	SPMM6081 Transducer connector and pinout	95
	PMM6081 Analog input schematic excerpt. This circuit condi-	
	tions the input signal and is used for SSB voice input or for ap-	
	plications providing line level analog input	97
14.15	5PMM6081 Analog output schematic excerpt. This circuit pro-	
	vides a +/- 3.3V signal to the SMA output port. This signal is used	
	for the headphones output during SMA voice mode, or for a di-	
	agnostic port or to drive an external power amplifier if needed.	
		98
15.1	Popoto Battery Mux Board. Power is provided by 1-5 6S Lithium	
	Ion Batteries provided on the Molex MiniFit Jr 4 pin connectors	
	on the left. Power is drawn from the Minifit Jr 4 port connec-	
	tor on the top, and charging is accomplished by connecting the	
	charger to the 2 port microfit connector on the right side of the	
	diagram	
	Battery Mux: Battery in Power out Schematic	
	PMM5021 Power Connectors and pinout.	101
15.4	Battery Mux: Charging Port Schematic. Use a constant current/-	
	constant voltage lithium ion charger for 6S Battery Packs. (1.875A)	
		102
16.1	Popoto Interface Board	106
	Popoto Interface Board Schematic	
	PMM6081 Switch Position used for running program command	112
17.2	PMM6081 Switch Position used for running program command	112
191	Format of a single PCM Log Packet. These packets are transmit-	
13.1	ted on the TCP PCM Recording socket	119
19 2	The PCM Packets are sent one after the other to the TCP Socket	
	or to the Target log file	120

1 Getting Started

1.1 Introduction

This section provides an overview of the various ways your Popoto Modem can be delivered and how to start using it. Each delivery option is tailored to different usage scenarios, from development and testing environments to ready-to-deploy applications.

1.2 Delivery Options

1.2.1 OEM Boardset

The OEM Boardset is designed for developers and manufacturers who wish to integrate the Popoto Modem into their own products or solutions. This option offers the most flexibility for custom applications. For detailed cabling and setup instructions, please refer to Chapter 2.

1.2.2 Lab Evaluation Platform

This delivery option includes an OEM Boardset mounted on a Lab Evaluation Platform, complete with a battery, a transducer, and an interface board for connection to a personal computer. It's ideal for quick testing and development. For setup details, see Chapter 3.

1.2.3 Enclosed Modem

The Enclosed Modem is housed in a depth-tolerant, waterproof enclosure, making it suitable for direct deployment in marine environments. Connectivity is provided through a wet-mate subsea connector. Cabling and operation information can be found in Chapter 5.

124 Deckbox

A complete modem solution housed in a Pelican case, the Deckbox option includes an external dunking transducer for immediate deployment. This option is designed for ease of use and durability. For more information on connecting and using the Deckbox, refer to Chapter 4.



1.3 Required equipment

Along with the hardware and software that comprise Popoto, it is necessary have the following equipment to facilitate the "Getting Started" procedure of this chapter.

- · 12-36 Volt 5 Amp DC Power Source
- · Fthernet Cable
- · PC Running Ubuntu with ethernet capability
- · Popoto Digital Interface

Other helpful PC software to have at the ready includes

- · MATLAB
- Audacity Audio Software
- · Python 3.10 or greater
- · Serial Port Terminal software

1.4 Bench Testing

1.4.1 What is an Air Test

Although the Popoto modem is designed to operate acoustically in an ocean environment, it can communicate (although somewhat less reliably) in air. The acoustic energy transmitted from Modem 1 can indeed be propagated through the air for short distances and received by Modem 2. Assuming the multipath energy from sound reflection of the walls is not too damaging, this signal can be detected and demodulated. If the multipath of the room prevents detection, some careful placement of sound absorbing materials such as foam or cloth, and repositioning either the transmitter or receiver transducer until reliable communication is usually possible.

Running an air test is a good way to validate operation prior to water operation. Once reliable communication is achieved, various commands such as ranging can be exercised effectively. It should be noted that the range command will not yield accurate range estimates in air because the speed of sound in air is more than 5 times slower than the speed of sound in water. However, ranging in air is still useful for basic system checkout prior to fielding the modem in the water.

1.4.2 RS-422 UART connection

For the purpose of "Getting Started", it is recommended that the RS-422 connection be used. This port can be accessed using the first serial port that enumerates when connected to the Popoto Interface Board's USB port.

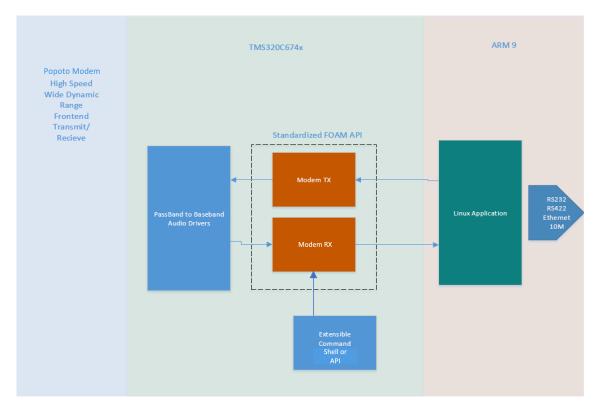


Figure 1.1: High Level Popoto Block Diagram

If the Popoto is delivered in a deckbox, this connection will be a standard USB communication port connection.

When the UART USB cable is inserted the OS will discover the new communication device. At that time open any standard serial terminal program configured for communication at 115200 bps, with no parity, 8 data bits, and 1 stop bit. About 20 seconds after power on, the user will be presented with a pshell command prompt.

1.4.3 Running the application

For this section it is assumed that we will be running air tests under a serial connected pshell.

Once the modem has been completed the boot process it is possible to connect to the Popoto by way of pshell.

1.4.4 Checking the version number

From the pshell type

version

This is the version command. Popoto will respond with current software version number and serial number of the hardware.



1.4.5 Displaying Help

To list the commands supported by the pshell, simply type

help

Popoto will respond with a list of supported pshell commands. Note that tab completion for these commands is supported.

1.4.6 Sending a Test Message

When both modems are online and connected to their pshells, it is possible to send an acoustic ping from one modem to be received by the other.

At the pshell type

ping 4

This command initiates the transmission of a test packet at about 4 watts of acoustic power. This level of power is appropriate for an air test where the transducers of units are spaced 1-2 meters apart.

While the transmission is executing you will notice a red "transmitting" led illuminate on the transmitters analog board. Once the transmission completes (3-4 seconds) the led will turn off. On the receiver pshell, there should be indication of a packet received and the both the packet and the header data should be displayed.

A message indicating 'CRC error' may occurs at the time of transmission on the receiving Popoto instead of a 'CRC check' message. This occurs if the multipath of the room is adding so much interference that the demodulator cannot successfully demodulate the test packet. In such a case, reposition the transducers or pad any reflective surfaces to minimize acoustic reflection.

1.4.7 Sending an Arbitrary Message

To transmit an arbitrary message from the pshell, the transmitJSON API provides the most flexible interface. A JSON message formatted as below is passed as an argument to the transmitJSON command.

```
transmitJSON { "Payload": {"Data": [ 49,50,51,52,53,54,55,56,57,48,49,50,51,52,53,54]}}
```

sends the bytestream 49,50,51,52,53,54,55,56,57,48,49,50,51,52,53,54. to the remote modem.

1.4.8 Addressing a particular modem

Each modem has a LocalID, which is an address between 0 and 254. To address a message to a particular modem, it is necessary to know the remote modem's ID. Then, by setting the variable RemoteID, to the value of the target modem's LocalID, it is possible to address subsequent messages to the desired modem.



1.4.9 Setting the data Rate of the Payload

All packets comprised of three parts the acquisition, the header, and an optional payload. The acquisition sequence does not change for different data rates. The header is always sent at 80bps frequency hopping mode. The header contains information such as the transmit ID, intended receiver ID (broadcast ID is 255), transmit power, if there is a payload of information following, what the payload length is, and what the modulation scheme for sending the payload is.

An example of a PSK payload packet is shown.

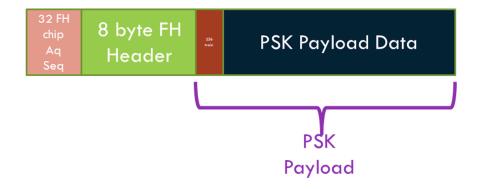


Figure 1.2: PSK Payload Message Structure

The modulation rate of the payload portion of the waveform is configured using the PayloadMode variable. The various modulation schemes are:

- · 0 80bps Frequency Hop mode
- · 15120 bps PSK
- · 2 2560 bps PSK
- · 3 1280 bps PSK
- · 4 640 bps PSK
- 5 10240 bps PSK

The PSK receiver includes user configurable parameters that can be adjusted for optimal reception as a function of the channel. These include the number of taps for the equalizer and the location of the first tap. Under normal operation these parameters are set for typical operation with the number of forward taps (FIR) = 44, the number of backward (IIR) taps=6, and the location of the first tap=16. Note the computational load of the receiver increases with the square of the number of taps and the maximum number of taps (Forward + Backward) should not exceed 70. Also note that additional taps often increase noise and as such more taps does not always mean better performance.



Table 1.1: PSK Parameters

Parameter	Type	Description
PayloadMode	int	Sets the modulation scheme of the transmitter payload
		0. Freqeuncy Hop FSK 80 Bits/sec
		1. PSK 5120 BPS
		2. PSK 2560 BPS
		3. PSK 1280 BPS
		4. PSK 640 BPS
		5. PSK 10240 BPS (uncoded)
PSK_FnTaps	int	Sets the number of taps for the FIR portion of the filter (default 44)
PSK_BnTaps	int	Sets the number of taps for the IIR portion of the filter (default 6) Note: PSK_FnTaps+PSK_BnTaps must be less than 70
PSK_StartOffset	int	Sets the location of the first tap in the FIR delay line (default 0) **

1.4.10 Telnet Chat Operation

Lastly, it is possible to open up a chat window between both modems. From a linux prompt on the terminal, type

telnet 10.0.0.232 17001

this will open a telnet window connected to Modem A (at the 10.0.0.232 address).

Assuming Modem B has been setup with and IP address of 10.0.0.223. Next open another linux prompt on the terminal and type

telnet 10.0.0.223 17001

This will start another telnet session connected to Modem B (at the 10.0.0.223 address)

Chat operation is a mode of the modem where two modems can communicate keyboard to keyboard in a normal text configuration in a half duplex mode. To enter chat mode the



chat

command is entered at the pshell prompt. It is necessary to enter chat mode at both the receiver and transmitter for chat mode to work.

While in chat mode characters that are entered in the keyboard are grouped into packets and transmitted through the water, received by the receiver and presented to the user.

The start and stop of a packet is determined by 3 factors. The first method is to enter a carriage return after a string of characters. This return signals the end of a string of characters to be sent out of the modem. The second method to signal the end of a string is to timeout. After period of no typing that exceeds the user configurable timeout parameter, the transmitter console will take the user input gathered up until the timeout interval, group them into a packet and send them. The last way to terminate a sequence of characters for transmission is to exceed the user configured number of bytes per packet. For example if the parameter ConsolePacketBytes is set to 32, then input characters are bundled into groups of 32 and sent out automatically.

Table 1.2: Chat Mode Parameters

Parameter	Type	Description
ConsolePacketBytes	int	Sets the number of Sets the number of bytes in the data console after which the console bytes are automatically transmitted
ConsoleTimeoutSec	int	Sets the timeout in milliseconds for the data console, afterwhich any typed bytes are transmitted

To exit chat mode type ctrl-], followed by e for exit. Exit from both the transmitter and receiver to resume normal operation.

1.4.11 Sending a Range Command

Once a successful ping has been achieved, it is instructive to try a range command. The syntax of the range command is as follows:

range 4

This command instructs the initiating modem (Modem A) to send a range request at the power associated with about 4 watts. You will immediately see the transmitter red LED of Modem A illuminate for about a second. This request should be received by the receiving modem Modem B. Upon successful demodulation of the range request by Modem B, it schedules a transmission back to the receiver of Modem A. This new transmission will illuminate



the red LED of Modem B. When that transmission is complete, Modem A will measure the time required to receive the response to its request, account for turnaround time, and calculate the round trip time. This is mapped to a distance using the speed of sound in water and range is calculated.

Upon successful completion of the whole ranging cycle, a range report will be displayed on the Modem A pshell.

2 OEM Modems

2.1 OEM Modem System

A complete Popoto system consists of the following hardware components:

- 1. Transducer
- 2. Analog board
- 3. Digital board
- 4. SD card

2.1.1 Analog Board

The Popoto analog board provides signal conditioning to and from the transducer and provides conversion of the analog signals to the digital domain. The signal conditioning of the receiver includes amplification, high pass filtering of the data, and analog to digital conversion. The signal conditioning for transmitter includes digital to analog conversion, and high power transmit amplification.

The analog board also includes a line level analog path to and from SMA connectors for debug purposes. The analog board directly connects to the digital board by way of a 30 position connector at the bottom of the board. A picture of the analog board is shown in Figure ??:

2.1.2 Digital Board

The Popoto digital board provides for all signal processing, interface to analog board, interface digital communication interfaces including:

- · RS-232
- · RS-422
- · Ethernet
- · GPIO
- · SPI



Figure 2.1: The PMM6081 Analog board

· 12C

It also hosts all non-volatile and volatile memory, performs power conditioning, and real-time clock functionality. The heart of this board is and OMAP L138 device made by Texas Instruments. This device includes an ARM 9 host processor which runs Arago Linux, and a TMS320C647x DSP floating point DSP device which performs the computationally intensive signal processing tasks.



Figure 2.2: The PMM6081 Digital board

2.1.3 micro SD Card

The enclosed Popoto micro SD card has been formatted using Ext4 and includes all of the operating system files, the Popoto application, the DSP application. The SD card includes a directory /captures and provides room for several GB of diagnostic storage if desired.



2.1.4 Heat Sink/Mounting Tray

The Popoto heat sink/mounting tray is used to act as a heat sink for the power amplifier on the underside of the analog board. This heat conductive interface is critical to achieving the full transmit capability of Popoto. The thermal junction between the mounting tray and power amplifier on the analog board requires conductive thermal compound at this interface.



Figure 2.3: The PMM5021 Mounting Tray with M4 mounting screws



3 Lab Evaluation Platform

3.1 Introduction

The Lab Evaluation Setup for the Popoto Modem offers a comprehensive package for developers and researchers to quickly begin working with the Popoto Modem system. This setup is designed to facilitate easy and efficient evaluation of the modem's capabilities in a laboratory environment or for field tests such as pier-side or pool tests.

3.2 What's in the Box

The Lab Evaluation Setup includes the following components:

- · An OEM Boardset for the core modem functionality.
- · A Modem Interface Board for connections to external devices.
- · A Lithium Ion battery to power the setup independently.
- · A 3D printed lab evaluation platform that securely holds all components.
- A PMT28 transducer equipped with a cable of sufficient length for versatile testing environments.
- · A battery charger for maintaining power supply.
- · A USB Cable for connecting the Modem Interface Board to a computer.

3.3 Setup Overview

The Lab Evaluation Setup is designed to provide a rapid, yet inexpensive entry point into the world of underwater communication systems. By combining an OEM Boardset, Modem Interface Board, and PMT28 transducer, users can begin testing and development without the need for extensive setup or additional hardware.

This plug-and-play configuration not only reduces initial costs but also accelerates the process from unboxing to operational testing. The included 3D printed mount fixtures all components securely facilitating tests in a lab environment.



4 DB100 Deckbox

4.1 Description

The DB100 is comprised of a Popoto Modem electronics board set, a Popoto Interface board, and Lithium Ion battery all enclosed in a rugged Pelican 1300 case. All connectors are IP67 splash proof, making for a portable easy to use acoustic communications device. DB100 is designed to be used with an external computation platform such as a laptop or SBC, and can interface to those devices via USB, or via ethernet.



Figure 4.1: The Popoto DB100 Deckbox



4.2 Deckbox Models

The DB100 platform supports all Popoto Modem general-purpose modem boardsets. A low cost PMM3511 based DB100-3 is the entry point to the Popoto Deckbox line, and this line is enhanced by the PMM5021 Based DB100-5. This DB100-5 has 2 further variants beyond the base model, DB100-5-2 Provides an extra hydrophone channel for input, and the DB100-5-SSB incorporates Single sideband voice, with connectioins for headphones and microphone, as well as a push to talk switch and volume controls. DB100-6 is built around our multichannel PMM6081 and afford additional processing capability for user scripts and signal processing.

4.3 Dunking Transducer

The PMT28-10-DT dunking transducer shipped with the Popoto Modem is cabled with a 10 meter long Polyurethane cable, connected to a 4 Pin JAE connector.

4.4 Front Panel connections

4.4.1 Transducer

To present the information using tables in the 'longtable' format, you will need to first ensure that the 'longtable' package is included in your document preamble. Then, you can replace the 'itemize' sections with 'longtable' environments for each set of pin assignments. This approach is useful for documents that require detailed tables that may span multiple pages. Here's how you can adjust the LaTeX snippet to include these details in tables:

4.4.2 Transducer Connector Specifications on the DB100 Deckbox

The DB100 Deckbox series includes several models, each utilizing different transducer connectors. These connectors are critical for ensuring the correct functionality and compatibility with various transducer and hydrophone systems.

4.4.3 Models DB100-3, DB100-5, and DB100-5-2

For the DB100-3, DB100-5, and DB100-5-2 models, the connector type is a 4-pin JAE: JN1AS04MK1. The pin assignments are detailed in the following table:



Table 4.1: Pin Assignments for DB100-3, DB100-5, and DB100-5-2

Pin Number	Assignment	Notes
1	Transducer Positive	
2	Alternate Channel	Applicable only for DB100-5-2
3	Alternate Channel	Applicable only for DB100-5-2
4	Ground	

4.4.4 Model DB100-6

The DB100-6 model utilizes a 10-pin JN1AS10ML1 connector to accommodate additional hydrophones. The pin assignments for this connector are:

Table 4.2: Pin Assignments for DB100-6

Pin Number	Assignment	Notes
1	Transducer Positive	
2	Hydrophone 1 Positive	
3	Hydrophone 2 Positive	
4	Hydrophone 3 Positive	
5	Hydrophone 4 Positive	
6	Hydrophone 5 Positive	
7	Hydrophone 6 Positive	
8	Hydrophone 7 Positive	
9	Hydrophone 8 Positive	
10	Ground	

4.4.5 USB

The USB port on the front panel of the modem connects to a computer's USB Host port. This connection provides 2 channels of USB-Serial connection. From the factory the first channel is connected to the Pshell, and the second channel is connected to the Popoto Modem's Linux Console. This is generally the fastest way to get started with the Popoto Deckbox.

4.4.6 Ethernet

The eThernet port on the front panel is designed to operate with the Stewart XXXXX Ethernet cable. This cable has a locking connector that keeps the connections to the ethernet water tight. Although it is possible to use a standard ethernet cable, it is not recommended, as the IP-rated ethernet connector does not include a provision to latch the ethernet cable in place. Failure to use the proper locking cable will result in unreliable ethernet connections.

4.4.7 Charging

The front panel of the modem features a charging port that utilizes a SwitchCraft 721FMS connector. This connector is designed with a tip-positive pin con-



figuration, ensuring compatibility with specific charging requirements. The Popoto Constant Current Constant Voltage (CCCV) battery charger is designed to connect directly to this port, facilitating efficient charging of the Deckbox battery. This direct connection streamlines the charging process, ensuring that the device is adequately powered for operation.

4.4.8 Headphone and Microphone Jack

For the headphone and microphone interface, the DB100-5-SSB model is equipped with a 3.5mm jack, utilizing a Tensility Intl.: 10-02845 connector. The pinout configuration for this connector is as follows:

Table 4.3: Pinout for Tensility Intl.: 10-02845 Connector

Pin Number	Function
1	Left Headphone
1	Right Headphone
1	Microphone
4	Ground

This connector supports a standard 3.5mm headphone and microphone setup, providing the users with a straightforward means to communicate through the device. The pinout ensures that users can leverage standard audio equipment to interact with the system, enhancing the usability and versatility of the DB100-5-SSB model.

4.5 Single Sideband Voice Feature of the DB100-5-SSB

Please refer to 10 for detailed information about the SSB feature of the DB100-5 SSB.

4.6 Getting Started with the DB100

The DB-100 Deckbox offers a seamless way to begin working with the Popoto Modem. It is a self-contained unit that integrates a power source (battery) and all necessary interfaces for connecting to a laptop via USB or Ethernet. For newcomers, the most straightforward method to initiate communication with the deckbox is through a USB connection. This connection enumerates as two serial ports on the laptop, providing access to various functionalities of the Popoto Modem.



4.7 USB Connection

Upon connecting the DB-100 Deckbox to your laptop via USB, it will enumerate as two serial ports. The appearance of these ports varies depending on the operating system:

- **Windows:** The ports are listed as COM ports in the Device Manager.
- macOS: Look for devices named '/dev/tty.identifier' in the '/dev' directory.
- **Linux:** Devices appear as '/dev/ttyUSBX' in the '/dev' directory.

The first port provides direct access to the Popoto Pshell, a powerful interface for configuring and controlling the modem.

4.8 Initial Setup

4.8.1 Connecting the Transducer

Begin by connecting the transducer to the transducer connector located on the front panel of the DB-100 Deckbox. Align the arrow on the cable connector with the top mark on the deckbox connector. Gently seat the connector in position before pushing it in until a positive click indicates it is securely connected.

4.8.2 Powering On

Next, connect the USB cable from your PC to the Console port on the DB-100 Deckbox. Power on the unit by pressing the I/O button. Note that, depending on the model, it may take up to 3 seconds for the light around the button to illuminate. Once on, you will be greeted with a 'Popoto->' prompt on the first serial port.

4.8.3 Connecting to the Modem

To interact with the modem, use a serial utility such as PuTTY. This will allow you to communicate directly with the modem via the connected serial port.

4.9 Additional Setup for Multiple Units

If you possess two DB-100 Deckboxes, repeat the setup process for the second unit to enable communication between them. For those with a Deckbox and OEM bundle kit, refer to the "Getting Started" section for the initial setup of the additional unit.

If your setup includes a Deckbox and an enclosed unit, see section ?? for instructions on preparing the second unit. Following these steps will allow you to conduct an airtest as detailed in section 1.4.



4.10 Care

To ensure the longevity and optimal performance of the DB100, it is crucial to maintain the cleanliness of its Pelican Case. Given the sensitive electronics housed within, a meticulous approach to cleaning is recommended, focusing on methods that mitigate the risk of water damage. The following guidelines provide a comprehensive approach to safely cleaning the Pelican Case:

- 1. **Preparation:** Ensure the DB100 is switched off and disconnected from any external power sources.
- 2. **Dusting:** Utilize a soft, dry cloth or a brush with gentle bristles to dust off the surface of the case. This initial step helps in removing loose dust and debris, reducing the risk of scratches during cleaning.
- 3. **Spot Cleaning:** For targeted cleaning of spots with stubborn dirt, slightly dampen a soft cloth with water and a mild soap solution, if necessary. It is crucial to ensure the cloth is well-wrung to prevent excess moisture. Gently wipe the affected areas without saturating the case.
- 4. **Using Spray Cleaners:** If using spray-on cleaners, choose products designed for electronics or those that are mild and non-abrasive. Spray the cleaner onto the cloth rather than directly onto the case to control the amount of moisture applied.
- 5. **Drying:** After cleaning, thoroughly dry the case with a clean, soft cloth. Confirm the case is completely dry before reconnecting any power sources or using the DB100.
- 6. **Regular Checks:** Periodically inspect the case for any signs of wear or damage, especially around seals and fasteners. Maintaining the integrity of the case is vital for protecting the DB100 against environmental elements.

Adhering to these cleaning guidelines will help in preserving the condition of your DB100's Pelican Case, ensuring the device remains protected and functional. The emphasis on gentle and dry cleaning methods is paramount to safeguarding the sensitive electronics from moisture-related damages.

5 Enclosed Modems M2000/M6000/S1000

5.1 Enclosed Modems

5.1.1 Popoto M2000

The **Popoto M2000** modem is the flagship product, featuring a robust design with a machined aluminum housing capable of withstanding depths up to 2000 meters. It exemplifies the brand's commitment to durability and reliability in underwater communication.

5.1.2 Popoto S1000

The **Popoto S1000** emphasizes compactness and efficiency, housed in a machined aluminum casing that withstands up to 1000 meters. With a 20W transmitter, it serves a wide range of underwater communication needs with versatility.

5.1.3 Popoto M6000

Designed for extreme environments, the **Popoto M6000** with its machined titanium shell is capable of withstanding depths of up to 6000 meters. It is the most rugged modem in the lineup, ensuring reliable data transmission in the most challenging conditions.

5.2 Connectors

5.3 M2000/S1000 Connectors

The M2000 and S1000 series modems use SubConn microcircular connectors to provide an electrical interface between the inside of the bottle and the outside. These connectors are typically either MC8BHF for the S Series Modems or MC16BHF connectors. Legacy M2000 Units may be fitted with an MC10BHM 10 pin connector.



Face view (male)

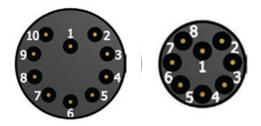


Figure 5.1: Pin Locations: 10 Pin and 8 Pin Connectors as viewed from the face of the male connector.

5.3.1 Connector Part Numbers

Part Number	Description
MCBH16F	16 Pin Bulkhead microcircular female connector
MCBH10M	10 Pin Bulkhead microcircular male connector
MCBH8F	8 Pin Bulkhead microcircular female connector



5.3.2 10 Pin Ethernet Option

Pin Function	Notes
Ethernet Tv+	T568A Green White
Luiennet ix	T568B Orange White
Fthernet Tx-	T568A Green
Echonice ix	T568B Orange
Ethernet Rx+	T568A Orange & White
_==.7011100101	T568B Green & White
Ethernet Rx-	T568A Orange
DC272 Dv	T568B Green
Vin	(+12v to +20v)
LED Power	5V out when unit is powered up
Gnd	
PowerSwitch	Short to ground to power down unit
	Ethernet Tx+ Ethernet Rx+ Ethernet Rx+ Ethernet Rx- RS232 Rx RS232 Tx Vin LED Power Gnd

5.3.3 10 Pin RS-422 Option

Pin Number	Pin Function	Notes
1	RS 422 Rx +(FTDI)	J8-1 RS 422 TX+ (Popoto) Yellow
2	RS 422 Rx -(FTDI)	J8-2 RS433 TX- (Popoto) White
3	RS 422 Tx+(FTDI)	J8-3 RS422 Rx+ (Popoto) Orange
4	RS 422 Tx-(FTDI)	J8-4 RS 422 Rx- (Popoto) Red
5	RS232 Rx	
6	RS232 Tx	
7	Vin	(+12v to +40v)
8	LED Power	3.3V out when unit is powered up
9	Gnd	
10	PowerSwitch	Short to ground to power down unit



5.3.4 16 Pin Universal Option

Pin Number	Pin Function	Notes
1	LED Power	3.3V out when unit is powered up
2	RS 422 Tx+(FTDI)	J8-3 RS422 Rx+ (Popoto) Orange
3	RS 422 Tx-(FTDI)	J8-4 RS 422 Rx- (Popoto) Red
4	RS 422 Rx +(FTDI)	J8-1 RS 422 TX+ (Popoto) Yellow
5	RS 422 Rx -(FTDI)	J8-2 RS433 TX- (Popoto) White
6 7	PowerSwitch Gnd	Short to ground to power down unit
8	Ethernet Tx+	T568A Green White T568B Orange White
9	Ethernet Tx-	T568A Green T568B Orange
10	Ethernet Rx+	T568A Orange & White T568B Green & White
11	Ethernet Rx-	T568A Orange T568B Green
12 13 14 15 16	RS232 Tx RS232 Rx PPS Interrupt Gnd Vin	Used for PPS in or GPIO Ground (+12v to +40v)



5.3.5 8 Pin Ethernet Option

Pin Number	Color	Pin Function	Notes
1	Red	Ethernet Tx+	T568A Green White
ı	Red	Littlett ix	T568B Orange White
2	Black	Ethernet Tx-	T568A Green
۷	DIACK	Luienieu ix-	T568B Orange
3	Yellow	Ethernet Rx+	T568A Orange & White
3	reliow		T568B Green & White
4	Blue	Ethernet Rx-	T568A Orange
4	Diue	Ethernet RX-	T568B Green
5	Orange	Vin	(+12v to +40v)
6	Brown	LED Power	3.3V out when unit is powered up
7	Purple	Gnd	
8	Green	PowerSwitch	Short to ground to power down unit

5.3.6 8 Pin RS-422 Option

Pin Number	Color	Pin Function	Notes
1	Red	RS 422 Rx +(Host)	J8-1 RS 422 TX+ (Popoto) Yellow
2	Black	RS 422 Rx -(Host)	J8-2 RS433 TX- (Popoto) White
3	Yellow	RS 422 Tx+(Host)	J8-3 RS422 Rx+ (Popoto) Orange
4	Blue	RS 422 Tx-(Host)	J8-4 RS 422 Rx- (Popoto) Red
5	Orange	Vin	(+12v to +40v)
6	Brown	LED Power	5V out when unit is powered up
7	Purple	Gnd	
8	Green	PowerSwitch	Short to ground to power down unit



5.3.7 8 Pin RS-232 Option

Pin Number	Color	Pin Function	Notes
1	Red	RS-232 Rx (Host)	J8-12 RS-232 TX (Popoto)
2	Black	RS-232 Tx (Host)	J8-13 RS-232 RX (Popoto)
3	Yellow	GPIO/PPS	J8-14 PPS
4	Blue	No Connect	No Connect
5	Orange	Vin	(+12v to +40v)
6	Brown	LED Power	J8-1 3.3V out when unit is powered up
7	Purple	Gnd	
8	Green	PowerSwitch	J8-6 Short to ground to power down unit

5.4 Lab Cable

Lab cables are a means of connecting Popoto modems to evaluation interfaces, facilitating a straightforward method for testing and exploring modem functionalities in lab settings. These cables are specifically designed to match the connectivity options of different modem models.

5.5 Types of Lab Cables

Depending on the Popoto modem model, there are various lab cables available, each designed to support the interface options of the specific modem.

5.5.1 16-Pin Lab Cable

The 16-pin lab cable is compatible with the **M2000** and **M6000** models, providing RS232, RS422, Ethernet, and control connections for these devices.

5.5.2 8-Pin Lab Cables for S1000

The **\$1000** modem, given its compact design, uses a Subconn 8 pin connector. This connector offers tailored connectivity options requiring specific 8-pin lab cables. Users can choose from:

- · 8-Pin Ethernet
- 8-Pin RS232
- · 8-Pin RS422

It is important to note that the S1000's 8-pin connector does not support all interfaces simultaneously. Thus, the desired interface must be specified at the time of order, and it is important to match the selected configuration with the proper Lab cable.



5.5.3 Extension Cables

For broader deployment applications, the lab cable's reach can be significantly extended using a standard Subconn compatible Male to Female extension cable. This accessory is designed to facilitate flexible deployment configurations, accommodating varying depths and distances as required by the operational environment.

5.5.3.0.1 Availability: The compatible extension cable can be acquired directly from www.popotomodem.com, ensuring that you have access to products designed to work seamlessly with your Popoto modem, providing the following benefits.

- **Operational Flexibility:** By extending the lab cable, modems can be deployed in a wider variety of environments, ensuring optimal placement for data transmission and reception.
- **Customized Deployment:** The availability of extension cables allows for tailored setup configurations, meeting specific depth and distance requirements without compromising the integrity of the connection.
- **Seamless Integration:** Designed specifically for compatibility with Popoto modems, these extension cables provide a reliable and straightforward solution for enhancing your modem's deployment capabilities.

5.6 Power Down and Dummy Plugs

5.6.1 Understanding Power Down Plugs

For ensuring the safety and longevity of Popoto modems during storage or shipment, a special component called the "Power Down Plug" is utilized. This section describes its functionality, usage, and precautions. For uncabled deployment, a dummy plug is included that provides for a water-tight termination of the electrical connections on the bottle.

5.6.2 Design and Functionality


Each Popoto modem is equipped with a Subconn Microcircular connector that includes a designated power down pin. This configuration is designed to ensure that the modem can be securely powered down when necessary. The power down process is initiated by connecting the power down pin to the ground pin within the same connector, effectively powering off the unit.

When the power down pin is disconnected, the modem is in the ON state. This method ensures that the modem is maintained in an "on" state, ready for operation when deployed with a dummy plug.



5.6.3 The Power Down Plug

For shipping and storage purposes, a "Power Down Plug" is provided with each modem. This plug is designed to short the appropriate pins, guaranteeing that the unit remains powered off during these periods. It's a critical component for maintaining the modem's safety and ensuring it does not inadvertently power on.

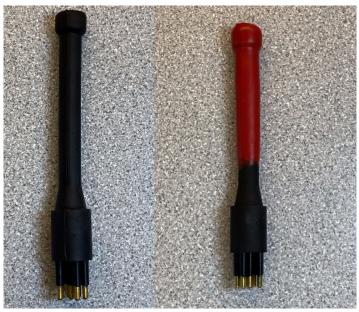

(a) 8 Pin Dummy plug. (b) 8 Pin Powerdown plug. Note Note the BLACK rubber the RED rubber whip indicating whip indicating that this is NOT a dummy plug is a dummy plug

NOTE

DO NOT DEPLOY a modem with a RED whip plug. This plug turns off the modem, and you will not be able to contact it acoustically. All deployments should be with cables, or with BLACK whip dummy plugs.

5.7 Charging

Ensuring your Popoto modem is properly charged is crucial for optimal performance and longevity. This section outlines the correct charging procedure using the designated Popoto Lithium Ion (Li-ion) battery charger, which adheres to the Constant Current Constant Voltage (CCCV) charging protocol.

Each lab cable provided with your enclosed modem features designated battery and ground pins. These are specifically configured for direct connection to the Popoto Li-ion battery charger, ensuring a secure and efficient charging process.



5.7.1 Using the Popoto Li-ion Battery Charger

The Popoto Li-ion battery charger is designed to deliver a CCCV charging cycle, optimal for the specific battery chemistry of the Popoto modem's battery. This charging method is essential for maintaining battery health, preventing overcharging, and ensuring longevity.

5.7.1.1 Indicator LED

The charger is equipped with an indicator LED that communicates the charging status:

- **Red LED:** Indicates that the charger is actively charging the battery.
- Green LED: Signals that the charging cycle is complete, and the battery is fully charged.

This visual feedback allows users to easily monitor the charging process and ensures the modem is ready for use when needed.

5.8 Disassembly

While disassembly of the M2000 enclosure may be necessary for maintenance or upgrades, it is important to proceed with caution. The units are vacuum tested before shipping to ensure a tight seal, and disassembly will break this seal, potentially leading to leaks.

5.8.1 Recommendation

It is generally recommended to keep the units sealed whenever possible. If disassembly is performed, it is recommended to conduct a re-vacuum test after reassembly to ensure the integrity of the seal and prevent any possible leaks. Contact Popoto Modem for information on conducting a vacuum test.

5.8.2 M2000/M6000

For a visual guide on the assembly and disassembly process, refer to the official video tutorial available at M2000 Enclosure Assembly and Disassembly on YouTube.

5.8.3 S1000

For detailed information about disassembling and reassembling the S1000, please contact Popoto Modem.



6 Popoto Transducer (PMT-28)

6.1 Transducer

The transducer for the Popoto Modem is available in three distinct delivery options, each designed to meet specific operational and environmental requirements. This section outlines the configurations and their respective applications.

6.2 Transducer Configurations

6.2.1 Internal Wiring Configuration

The internal wiring option utilizes a shielded, non-waterproof cable. This configuration is ideal for applications where the transducer is housed within a protective enclosure, ensuring the system's integrity against environmental factors.

6.2.2 External Wiring Configuration

For applications requiring direct exposure to the environment, the external wiring configuration employs a durable Polyurethane jacketed cable. This design enhances the transducer's resilience in outdoor or marine settings, offering reliable performance under varying conditions.

6.2.3 Dunking Transducer

The dunking transducer is equipped with a long cable that features a Polyurethane jacket and a strength member. This configuration is suited for applications that involve deploying the transducer into the water from a stationary platform, vessel, or buoy. The inclusion of a strength member ensures the cable's durability and integrity, even under the stress of deployment and retrieval.

All Popoto transducer options consist of a potted piezo ceramic. It is designed to efficiently convert mechanic signal energy to and from electrical analog signals in the 28 KHz region. A picture of the transducer is shown in Figure ??



Figure 6.1: The Popoto 28 Khz Transducer

6.2.4 Transducer Performance

This section provides an overview of the transducer performance for the Popoto modem PMT28, based on comprehensive testing conducted by an independent laboratory. The results offer insights into the transducer's capabilities and efficiency in operational scenarios.

6.3 Performance Curves

The performance of the PMT28 transducer is detailed through a series of curves that illustrate its free field voltage sensitivity, transmit voltage response, and transmit beam pattern. Each of these metrics provides valuable information for assessing the transducer's effectiveness in acoustic communication.

6.3.1 Free Field Voltage Sensitivity

The free field voltage sensitivity curve indicates how effectively the transducer converts acoustic power into electrical signals across a range of frequencies. This metric is crucial for understanding the transducer's ability to detect and process incoming signals.

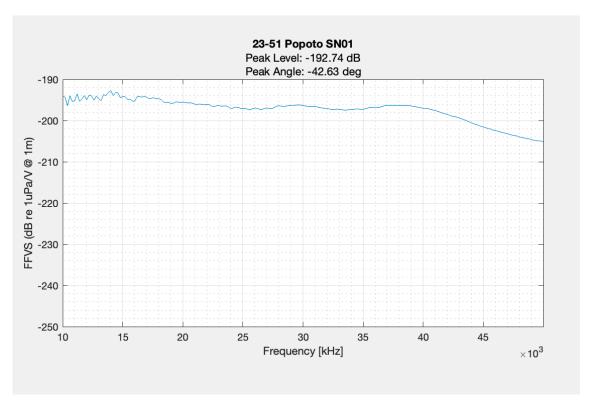


Figure 6.2: The Popoto 28 Khz Transducer Free Field Voltage Sensitivity

6.3.2 Transmit Voltage Response

The transmit voltage response curve demonstrates the transducer's efficiency in converting electrical signals into acoustic energy. This is essential for evaluating the power output and overall performance of the transducer during transmission.

6.3.3 Transmit Beam Pattern

The transmit beam pattern illustrates the directional characteristics of the transducer's emitted signal. Understanding the beam pattern is vital for optimizing system setup and ensuring effective communication over the intended area of coverage.



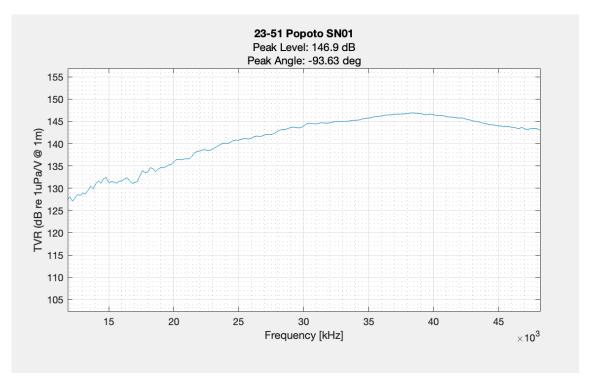


Figure 6.3: The Popoto 28 Khz Transducer Transmit Voltage Response

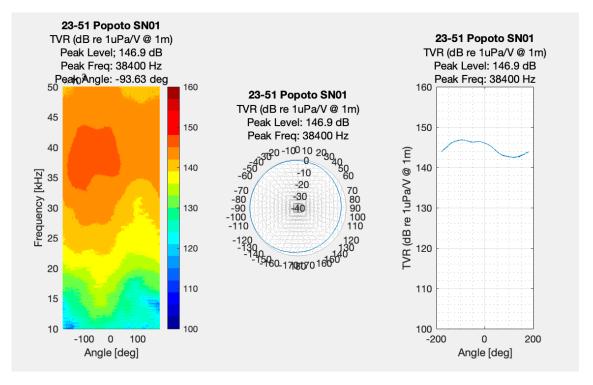


Figure 6.4: The Popoto 28 Khz Transducer Transmit Voltage Response

7 Communicating with Popoto

7.1 Introduction

The Popoto system consists of several components working together to create an acoustic digital communication system. Refer to Figure 7.1. At the lowest level, a Transducer provides the physical interface between the Modem and the water. This transducer is connected to the Analog board which can both drive the transducer as an output, and receive from the transducer as an input. The analog board digitizes input and converts the analog signal in the water to digital data which is sent to the Digital board. The digital board demodulates the data on the DSP, and sends the bitstream to the ARM9 which determines what to do with the data based on the current processing state.

7.2 Socket based JSON

The lingua franca of Popoto is JSON messages over sockets. Although there are many ways and APIs to communicate with Popoto, all of these methods and APIs funnel down to creating or displaying a JSON message to/from a socket.

7.2.1 Highlevel Description of Popoto API Sockets

The IO to all of the embedded Popoto software is accomplished using IP Sockets. Even the analog signal data supports the socket IO. This provides great flexibility for interface, test, software portability, and software test. These sockets also can interface through a thin layer of code to give us the familiar standard interfaces that are used in the field such as RS-422. Sockets are

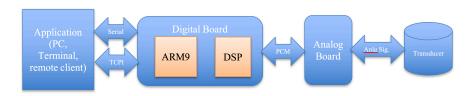


Figure 7.1: Popoto System Overview.



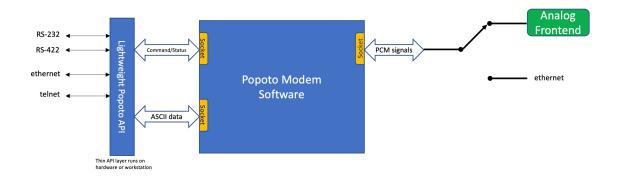


Figure 7.2: Popoto Modem Socket interfaces.

specified by the IP address of the Popoto modem as set by the user In addition to the IP address the following ports are used.

- 1. 17000 Command Port
- 2. 17001 Data Port (Telnet)
- 3. 17002 PCM Logging Port (Not for typical use)
- 4. 17003 PCM Output Port (Not for typical use)
- 5. 17004 PCM Input Port (Not for typical use)

7.2.2 Introduction JSON Messages

JSON stands for JavaScript Object Notation. JSON is a lightweight format for storing and transporting data. JSON is often used when data is sent from a server to a web page. JSON is "self-describing" and easy to understand.

JSON is built on two structures:

- A collection of name/value pairs. In various languages, this is realized as an object, record or struct.
- An ordered list of values. In most languages, this is realized as an array, vector, list, or sequence.

High level languages such as Python typically have JSON parsers available to easily parse JSON messages into variables of that language.

7.2.3 Commands

The basic structure for commanding Popoto happens using a JSON command message. This message consists of two parts, the Command keyword, followed by the Argument keyword. The basic structure of the command is as follows:



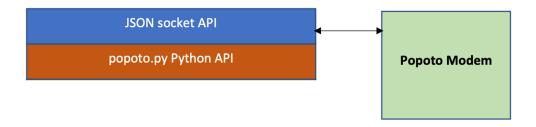


Figure 7.3: JSON API Interfacing to Python.

```
Example: Get the software version
An example of a simple JSON command is the command to check the software version. This command would be issued as follows:

{"Command": "GetVersion", "Arguments": "Unused Arguments"}

And would result in the modern responding as follows:
```

7.2.4 The Keyword Return Values

{"Info": "Popoto Modem Version 2.7.0"}

{"Command": "", "Arguments": ""}

Popoto modem returns information to the user using various keyword identifiers. These return keywords are designed to be self-identifying, and can be used for user application parsing.

7.2.5 System Level Variables

Popoto modem contains various internal variables. These variables are mode variables, configuration variables, or contain parameters extracted from the signal.

7.3 Facilitating JSON messages

As mentioned previously, the primary interface to the embedded Popoto algorithm is done over sockets using JSON messages. To make interaction and automated development easiest for a Popoto user, Popoto provides several API and a user shell Pshell. These APIs and shell, constitute a very thin layer that creates and interprets the socket based JSON messages.





Figure 7.4: Popoto Modem Matlab and JSON API.

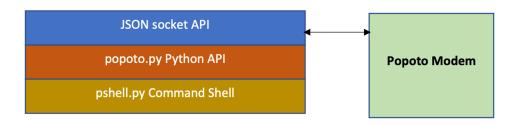


Figure 7.5: Popoto pshell to Popoto.py to JSON.

For example, the popoto.py layer provides python access and methods to create the JSON messages using python. Importing this library gives a user full control over the Popoto modem in the python language.

Much in the same way, a Matlab™ based API has been generated. The structure of how it interacts with Popoto is the same. Finally, a command shell called Pshell has been written in python, using the popoto.py API and the cmd command interpreter. This shell allows users to interact with the modem at a user level, typically through a serial connection. The pshell is default way for a user to interact with Popoto modems. The structure of this connection is a follows:

8 System Connections

The Popoto modem has 4 primary interfaces for an external CPU or computer to connect to:

- 1. RS422 4 Wire serial
- 2. RS-232 Uart
- 3. 10/100 BaseT networking
- 4. TTL (3.3V) UART

Each of these connections has properties that make it attractive in different situations.

8.1 RS-422 4 wire serial

8.1.1 Reasons to use it

Good for long distance connections, up to 1200 meters. Simple serial interface. Robust to noise and interference.

8.1.2 Reasons to avoid it.

Remote unit needs drivers. Only good for up to 115200 bits per second which is not adequate for PCM Streaming.

8.2 RS-232 Uart

8.2.1 Reasons to use it

The RS-232 uart is a 3 wire serial interface. It consists of 3 signals, Transmit data, Receive Data, and ground. The signal lines run at +/-15 Volts This interface is particularly attractive if the user is interfacing the modem to a local device, such as a micro controller on a UAV. All that is required is a tx, rx and gnd signal. For PC or laptop lab use, the pinout for this connector is a 5 pin 10mil header configured exactly as the standard FTDI USB cables, which makes for a simple USB to serial interface available off the shelf.



8.2.2 Reasons to avoid it

This interface is only good for very short distances, such as within the same enclosure. The bandwidth for this interface is limited to 115200 Bits per second which is not adequate for PCM streaming.

8.3 10/100BaseT

8.3.1 Reasons to Use it

The 10-100BaseT Ethernet networking provides the highest speed and most flexible connection to the Popoto system. Using TCP sockets over the ethernet provides upto 100MBits/S of full- duplex throughput to the Popoto from a remote computer located up to 100 meters away. This bandwidth can be used for real-time PCM capture, or rapidly updating software. Additionally, the flexibility of the TCP sockets allows for 3

8.3.2 Reasons to avoid it

The additional speed and flexibility of the ethernet comes at a cost of 250 milliwatts. In addition, the range of the ethernet is limited to 100 meters.

8.4 TTL (3.3V) UART

8.4.1 Reasons to use it

The TTL (3.3V) uart is a 3 wire serial interface. It consists of 3 signals, Transmit data, Receive Data, and ground. The signal lines run at 3.3Volts This interface is particularly attractive if the user is interfacing the modem to a local device, such as a micro controller on a UAV. All that is required is a tx, rx and gnd signal. For PC or laptop lab use, the pinout for this connector is a 5 pin 10mil header configured exactly as the standard FTDI USB cables, which makes for a simple USB to serial interface available off the shelf.

8.4.2 Reasons to avoid it

This interface is only good for very short distances, such as within the same enclosure. The bandwidth for this interface is limited to 115200 Bits per second which is not adequate for PCM streaming.

8.5 Modes of operations

The flexibility of the Popoto system provides for several use-cases. Each of these use-cases applies to a different product scenario, so it is important when deciding which to employ, that the requirements of the end product are carefully considered.



8.5.1 Local pshell

The pshell is a python program that connects with the Popoto application and provides a shell interface to the modem and its command, status and data interfaces. This shell provides simple commands such as send ranging, or setTxPower level so that either under human or computer control the modem can be utilized. In this use-case, the interface to the modem can be any one of:

- · Serial RS-232
- · 4 Wire RS-422
- Ethernet over SSH
- Ethernet over Telnet

The pshell program runs co-resident with the popoto_app on the OMAP's ARM core processor. Figure 8.1 shows local pshell processing.

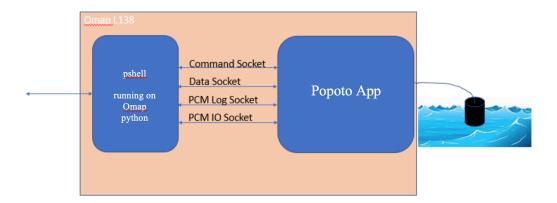


Figure 8.1: Local Pshell operation.

8.5.2 Remote pshell

The remote pshell operates in the same way as local pshell, however the pshell python program runs on a remote processor, and the connection to the popoto_app is over TCP Sockets and networks as shown in figure 8.2. Using a remote pshell is advantageous for streaming PCM directly to the PC's harddrive. Additionally the remote pshell is a good choice for running regression tests, as the regression suites can live on the remote pc, which can also log results.

8.5.3 Matlab™

Matlab™mode is very similar to remote-pshell mode, except that the connection to the popoto_app does not use a Python program, rather it connects

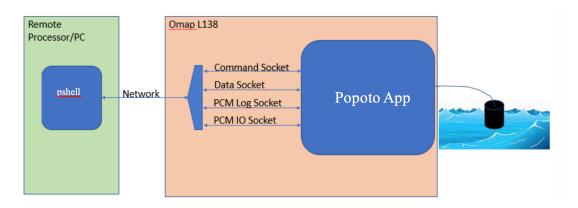


Figure 8.2: Connecting to Popoto using a remote pshell

using Matlab™. Matlab™is an excellent choice for running lab tests as it is a powerful language that is easy to use. Given Matlab™'s expense, and need for a full PC to run, it is not likely to be deployed in a customer's end product.

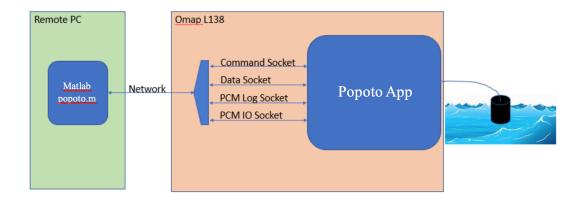


Figure 8.3: Connecting to Popoto Over Matlab™.

8.5.4 Custom interfaces

The Popoto system uses standard sockets for communications, so it is entirely possible for a customer to generate a custom interface written in the language of his choice. Figure 8.4 shows an example of a custom Popoto application. Please see the Popoto.py and Popoto.m files for ideas on how to implement such an interface.



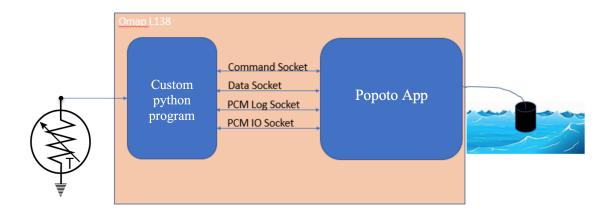


Figure 8.4: Popoto Modem implementing a custom application. In this picture, a Popoto modem is configured to measure a temperature sensor, and report its measurements via the acoustic channel.

8.6 Sleep and Power Down

Popoto has 2 different sleep modes for low-power operation, POWERDOWN and DEEPSLEEP. In Powerdown mode, nearly all of the voltage supplies on the board are shut down, resulting in a very low-power sleep. It takes about 20 seconds to power up and out of POWERDOWN mode. In DEEPSLEEP mode, the processor is put into hibernation, and all RAM is kept powered and refreshed. This mode consumes more power, but wakes up quite quickly (<1Sec). Each mode can be entered via an API or pshell command. The pshell exposes 2 commands powerdown, and deepsleep. Refer to the Popoto API reference for information about API access to the powerdown states. In either powerdown mode, a dedicated wake-up processor monitors the acoustic signals in the water looking for a wakeup signal. The wakeup signal is based on the standard modem message header acquisition pattern. To wake a modem, simply send any message into the water, and the acquisition signal will wake the modem. This transmitted message will be lost, but it serves simply to wake the unit.



9 Pshell

The pshell is a python command line shell utilizes commands defined in Popoto.py to provide a python scriptable command shell containing all of the most useful commands from Popoto.py. In addition the command shell provides for help and tab completion for ease of use. Responses from commands are echoed to the command shell along with asynchronous alerts from Popoto.

9.1 Modes of operation

There are two fundamental modes of operation of the pshell, it can be run on the user PC under the PC's local python or it can be run on the python that exists on Popoto OMAP platform. Because communication from pshell to the Popoto is done through IP sockets, this gives the flexibility of running pshell locally on the target or remotely on any PC on the network.

9.2 Requirements for running

python 2.7 (it is already installed on the Popoto hardware) CMD command shell installed (it is already installed on the Popoto hardware) CMD2 command shell installed (this gives some added features)

9.3 Invoking pshell

As delivered, the Popoto will invoke the pshell automatically and present a command prompt to the user on the RS-422 port.

9.3.1 The pshell.init file

The pshell.init file is located in the root directory /. This file is a collection of pshell commands that get executed on power up of Popoto. This file is intended for the user to customize this file and set bootable parameters such as localID, carrier frequency etc. The syntax is normal pshell syntax where line comment character # (first position) and whitespace are ignored.



9.3.2 Invoking pshell from a linux prompt

Although pshell runs automatically at boot. It is possible to terminate the local running pshell process and run the pshell from any python with an IP connection to Popoto. From the linux command prompt

```
python pshell
```

This will start the up the pshell and you are ready to being typing commands.

9.4 Invoking commands

9.4.1 Help

To gain a complete list of commands at any time simply type the command help. A full list of commands will be displayed. To get help on any of those commands, enter help <command> at the Popoto prompt.

9.4.2 Tab Completion

The pshell supports tab completion. Tab completion will also show a list of various options for a particular command.

9.4.3 Commands

This section presents a list of the currently implemented commands. A brief description is presented along with typical invocations.

9.5 Extending the pshell

One of the best parts of pshell is that it is easy to extend with simple python. For example if you want to make a command that does five ranges spaced by 30 seconds, it is as simple as adding these lines:

```
def do_nranges(self,line):
  for x in range(1,5):
    self.dol.range(.1)
    time.sleep(30.)
```

Note the command name in the pshell would be nranges. With the pshell, you have the power of the python language to create complex commands or specific syntaxes, mappings, command checking etc very quickly and efficiently.



9.6 Scheduling Transmissions

The Popoto Modem API offers a feature allowing users to schedule the transmission of a data packet at a specific time, utilizing the PCM sample count for precision. This document guides you through using this feature.

Understanding PCM Sample Time

Time within the Popoto Modem is measured in PCM samples, with a frequency of 102,400 samples per second. The PCMSampleCounter variable holds a 32-bit count of these samples, offering a high-resolution time base for scheduling transmissions.

Querying the PCMSampleCounter

To retrieve the current PCM sample count, use one of the following methods:

- Send the command get PCMSampleCounter to the modem.
- · From the pshell, type PCMSampleCounter and press Enter.

In versions 3.2.6.3, 3.2.8, or later, the PCMSampleCounter at the start of each received packet is reported in a JSON message, e.g., {"PCMSampleCount": 4446530}.

Scheduling a Transmission

To schedule the transmission of a packet, use the transmitJSON command with a specified departure time in PCM sample count. Here is the syntax for scheduling a transmission:

```
pshell> transmitJSON {"Payload":{"Data":"Hello"}, "DepartureTime":30000000}
```

This command schedules the packet containing the message "Hello" to be transmitted at the PCM sample count of 30,000,000.

Transmission Status

After scheduling a transmission, the modem reports the status through a series of JSON messages, indicating the scheduled departure time, the actual PCM sample count at transmission, and various modem settings adjustments. For example:

```
1 {"DepartureTime":150000000}
2 {"PCMSampleCount":138576000}
3 {"Info":"Value Set MODEM_Enable=1"}
4 {"Info":"Value Set MODEM_Enable=1"}
5 {"Alert":"TxComplete"}
6 {"Info":"Value Set MODEM_Enable=1"}
7 {"Info":"Value Set RxEnable=1"}
```



Handling Early or Past Scheduled Transmissions

It is important to note that scheduling a transmission to occur too soon (considering it takes approximately 300ms to power on the transmit Power Amplifier) or in the past will result in the transmission happening as soon as the hardware is ready. If a requested departure time is too early or has already passed, you will receive status messages indicating this, alongside the actual transmission details:

```
1 {"Info":"Requested Departure Time Too Early or in the Past. "}
2 {"DepartureTime":130555520}
3 {"PCMSampleCount":130483840}
4 {"Info":"Value Set MODEM_Enable=1"}
5 {"Info":"Value Set MODEM_Enable=1"}
6 {"Alert":"TxComplete"}
7 {"Info":"Value Set MODEM_Enable=1"}
8 {"Info":"Value Set RxEnable=1"}
```

9.6.1 Streaming Mode Operation for Popoto Modem

9.6.1.1 Introduction

9.6.1.1.1 Purpose This document explains the configuration and operational benefits of Streaming mode on the Popoto modem. This mode is designed to handle larger data packets efficiently, which is critical for applications requiring robust and continuous data transmission.

9.6.1.1.2 Scope The guide outlines the necessary settings for Streaming mode and quantifies the benefits in terms of transmission time savings.

9.6.1.2 Configuration

9.6.1.2.1 Enabling Streaming Mode To activate Streaming mode, set the following variables:

- **ConsolePacketBytes**: Set to 256. This configuration specifies the packet size that the modem processes.
- **StreamingTxLen**: Set to 2048. This setting allows the modem to consolidate transmitted data into super packets or frames, reducing the frequency of required headers.

9.6.1.3 Operation

9.6.1.3.1 Sending Data In Streaming mode, transmitJSON messages of 256 bytes are sent continuously without the need for waiting for transmit complete messages. This setup significantly streamlines the data flow to the modem.



9.6.1.3.2 Data Handling by the Modem The modem software queues the incoming 256-byte messages and automatically combines them into super frames of 2048 bytes. This process minimizes communication overhead and increases data throughput.

9.6.1.4 Efficiency Gains

9.6.1.4.1 Header Duration and Transmission Savings Each header in Streaming mode consists of 176 chips (32 + 128 + 16 chips), with each chip lasting 6.25 milliseconds. The duration of one header is therefore 1100 milliseconds. Unlike the standard mode, where each packet would require a new header, Streaming mode only necessitates a header for each super packet (2048 bytes).

- **Header Duration**: 1100 ms per super packet.
- **Savings**: By transmitting seven fewer headers for each super packet, Streaming mode saves 7700 milliseconds per super packet compared to non-streaming mode.

9.6.1.4.2 Mathematical Expression of Savings The time saved per super packet in Streaming mode is calculated as:

 $Savings = HeaderDuration \times 7 = 7700ms$



10 Single Side Band Voice Operation



11 Single Side Band Voice Operation

11.1 Overview

Utilizing Popoto's single sideband transmitter (SSB) and receiver allow for half duplex voice communication through the water. The SSB signal is inherently and analog signal being through the ocean at a carrier frequency. As an analog signal, this means that the reception of the analog waveform includes the analog impairments of the channel. So if the channel is noisy, the receiver will hear the noise. If the channel has echo, the resulting speech will include echo. If there is no noise and no echo, and analog levels are set properly, there will be no distortion of speech aside of the normal band limiting associated with telecom speech. To utilize the SSB functionality of Popoto, it is necessary to ensure that the voice path electronics are powered up. This is done by ensuring jumpers J1 and J5 are populated.

11.2 SSB Transmitter

The transmitter consists of a single sideband modulator which receives speech from the microphone input J3 and modulates it up to carrier for transmission out of the tranducer and through the water. There are 3 ways to place the SSB transmitter in transmit mode.

- 1. A Popoto ssbtx command
- 2. A hardware PTT signal
- 3. Using the properly adjusted VOX

11.2.1 The ssbtx command

Issuing the ssbtx command places Popoto in transmit mode. This can be clearly seen by the transmit LED glowing red on the analog board. Once in transmit mode, audio that is input on SMA J3 will be modulated, shifted up to carrier, power amplified, and delivered to the transducer.



11.2.2 Adjustment of transmit power

Proper adjustment of the transmit power is critical for good operation of the SSB transmitter. Setting this power properly is a function of 2 variables

- 1. Microphone sensitivity
- 2. Desired transmit power

Both of these variables is are controlled by the SSB_Txpower variable. This variable should be set such that the desired PEP power is achieved while speaking at a normal level in the microphone.

11.2.3 Peak Envelope Power

The proper adjustment of power for voice operation revolves around properly setting the Peak Envelope Power. PEP is the value of power that is output by the transmitter when the speech is at peaks in its overall envelope. Typically average power of speech is between 10%-20% of the peak envelope power. These adjustments should be made while the transducer is in water. Also these setting can be approximated by careful monitoring of the input power in these peak regions and setting the SSB_Txpower constant appropriately. Choosing an appropriate PEP level is a function of the distance that one wishes to transmit, the SNR of the channel, along with the reflectivity of the channel. These settings can be experimentally derived in the water and presets can be made in the pshell for optimum speech quality.

11.2.4 PTT keying of the transmitter

The Popoto hardware presently includes two GPIOs that are used for PTT and also headset volume control. The truth table shown below illustrates the various modes associated with the GPIOS. When the two GPIOs are zero, the transmitter is keyed, when they are 1,1 the receiver operates, and the other two states will raise or lower the headset volume by 1 dB per click.

Table 11.1: SSB Control Bits

Gpio8[6]	Gpio7[14]	State
0	0	PTT Depressed (Transmit Mode)
0	1	Headphone Volume UP
1	0	Headphone Volume DOWN
1	1	Receive Mode **

In order to work with the PTT and VOL UP VOL DN the J7 Pin 3 and J7 Pin 9 Must be pulled up to 5V through their own individual 4.7K Resistors.

Table 11.2: SSB Pinout

Function	GPIO Number	Processor Signal	J7 Pin
VOL UP/PTT	GPIO8[6]	SPI_SOMI	J7_3
VOL DN/PTT	GPIO7[14]	EXP1	J7_9

11.2.5 Transmitter Vox

The SSB transmitter can be switched on using the speech signal itself. To utilize this feature, the SSB_Vxmode should be set to 1. Next the SSB_Vxlevel should be increase from zero slowly while speaking to arrive at the trigger point for the VOX. Proper setting of this level will ensure that constant level audio background will not trigger the transmitter, but onsets of speech will trigger the transmitter. Note that once the transmitter is keyed, the transmitter remains on for a period of 2 seconds.

11.3 SSB Receiver

Voice mode reception is enabled by issuing the ssb command from the pshell. At this command the modem will transition from data modem mode to single side band receiver. Demodulated audio will be present on the SMA connector J4. The audio level present on J4 is controllable by setting the SSB_Volume parameter to the user desired level.

11.3.1 Squelch

Additionally, the receiver incorporates a squelch for eliminating background noise between segments of received speech. To utilize the squelch it is important to set the SSB_SqLevel parameter in the pshell. An SSB_SqLevel of zero reflects no squelch and the receiver will be continuously in the receive state with demodulated audio being presented to the headphones. The user can gradually increase the squelch level until the interspeech segments are muted.

11.3.2 Noise Reduction and AGC

The SSB Receiver incorporates an advanced Noise reduction and AGC which are enabled using the SSB_NREnable flag as detailed in Table 11.3. This module monitors the background noise using spectral analysis to provide an adaptive noise reduction and speech quality improvement. Enabling this mode also enables the receiver automatic gain control. Using the noise reduction algorithm's internal metrics, the automatic gain control is able to determine when speech signals are present in the received signal. During these times, the receiver gain is adjusted to provide speech at an audible signal level.



11.4 Return to data mode

To return to data mode simply enter datamode at the pshell prompt.

11.5 SSB Controllable parameters

The table below show all of the settable/gettable parameters available through the pshell for the purpose of controlling SSB operation.

Table 11.3: SSB Control Bits

Parameter	Туре	Description
SSB_Volume		Sets volume level of headset
SSB_Txpower	float	Sets microphone gain; for SSB, this controls the Tx power
SSB_VxMode	int	Normal PTT set to 0; VOX mode PTT set to 1
SSB_VxLevel	float	Sets the trigger level for PTT VOX
SSB_SqLevel	float	Sets the background noise level for squelch trigger (0always on)
SSB_NREnable	int	Enable or disable the Noise reduction/AGC algorithm 1=On 0=Off

12 Janus Operation

12.1 Janus Overview

Janus is a standardized physical and data link layer for acoustic underwater communications designed and implemented by NATO's Centre for Maritime Research and Experimentation (CMRE). The standard is described in the NATO ANEP-87 specification. Further details about Janus are available at the wiki page maintained by CMRE.

12.2 Janus Bitstream

One of the defining features of Janus is its configurable payload scheme. Each message begins with an acquisition pattern, followed by modulated bits. These definition of these bitfields is variable based on the message content. The baseline bit allocation table for the Janus message is shown in Figure 12.1. In this figure, you will notice that bits 31-56 are referred to as the application data block. The definition of this block of bits is dependent on the Class UserID and Application Type bitfields found earlier in the message.

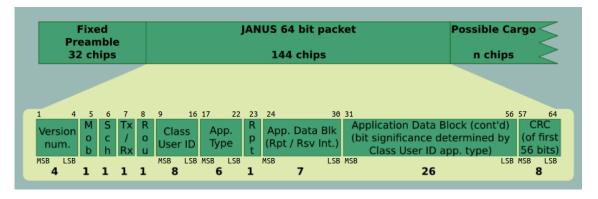


Figure 12.1: Janus Baseline Bit Aloocation. (from the Januswiki.com webiste)



12.3 Popoto Modem Implementation of Janus

The Popoto Janus modem fully implements all of the ratified Janus Class ID's, which currently include Class ID's 0, 2, and 16. Within the Popoto modem, each of the fields exported in the Class definition are represented by a field in a JSON encoded message. In this way, a JSON encoded message can be translated directly into a Janus message class. What follows are examples of each of the supported message types along with a link to the Class description on the JanusWiki.com website.

12.3.1 Class User Id: 000 Emergency

12.3.1.1 ApplicationType 1: Position Message

Refer to the wiki page Emergency Position Message Format for details about the fields associated with the Emergency position message. The example below shows how to construct a representative ClassID 000 ApplicationType I Emergency Position message for transmission by the Popoto Modem. This JSON structure would be encoded on a single line, and passed to the transmitJSON api of the pshell, or other Popoto API (C++, Python, Matlab).

```
{
1
     "ClassUserID": 0,
2
3
     "ApplicationType": 1,
    "Nationality": "AB",
4
    "Latitude": "90.000000",
5
    "Longitude": "0.000000",
6
    "Depth": "8190",
7
8
    "Speed": "0.000000",
    "Heading": "180",
9
10
    "MobilityFlag": "1",
    "ForwardingCapability": "1",
11
    "TxRxFlag": "0",
12
    "ScheduleFlag": "1",
13
     "Schedule": "10"
14
15 }
```



12.3.1.2 ApplicationType 2: Status Message

Refer to the wiki page Emergency Status Message Format for details about the fields associated with the Status message. The example below shows how to construct a representative ClassID 000 ApplicationType 2 Status message for transmission by the Popoto Modem. This JSON structure would be encoded on a single line, and passed to the transmitJSON api of the pshell, or other Popoto API (C++, Python, Matlab).

```
{
1
     "ClassUserID": 0,
2
     "ApplicationType": 2,
3
     "Nationality": "ZX",
4
5
    "02": "17.000000",
    "CO2": "5.000000",
6
7
    "CO": "0.000000",
    "H2": "5.000000",
8
    "Pressure": "103.199997",
9
10
    "Temperature": "50.000000",
    "Survivors": "1",
11
    "MobilityFlag": "1",
12
    "ForwardingCapability": "1",
13
     "TxRxFlag": "0",
14
    "ScheduleFlag": "1",
15
    "Schedule": "10",
16
     "RepeatFlag": "1"
17
18 }
```



12.3.1.3 ApplicationType 3: Position + Status Message

Refer to the wiki page Emergency Position and Status Message Format. The example below shows how to construct a representative ClassID 000 ApplicationType 3 Position and Status Message for transmission by the Popoto Modem. This JSON structure would be encoded on a single line, and passed to the transmitJSON api of the pshell, or other Popoto API (C++, Python, Matlab).

```
1
  {
2
     "ClassUserID": 0,
3
     "ApplicationType": 3,
4
     "Nationality": "PT",
5
6
     "Latitude": "38.386547",
     "Longitude": "-9.055858",
7
     "Depth": "16",
8
     "Speed": "1.400000",
9
     "Heading": "0.000000",
10
11
     "02": "17.799999",
     "CD2": "5.000000",
12
     "CO": "76.000000",
13
     "H2": "3.500000",
14
     "Pressure": "45.000000",
15
16
     "Temperature": "21.000000",
     "Survivors": "43",
17
     "MobilityFlag": "1",
18
19
     "ForwardingCapability": "1",
     "TxRxFlag": "0",
20
     "ScheduleFlag": "0"
21
22 }
```



12.3.2 Class User Id: 002 Underwater AIS

Refer to the wiki page Underwater AIS Message Format for details about the fields associated with the Underwater AIS message. The example below shows how to construct a representative ClassID 002 ApplicationType 8 underwater AIS message for transmission by the Popoto Modem. Note this AIS message has 2 contacts. This JSON structure would be encoded on a single line, and passed to the transmitJSON api of the pshell, or other Popoto API (C++, Python, Matlab).

```
{
 1
     "ClassUserID": 2,
2
     "ApplicationType": 8,
3
4
     "MobilityFlag": 1,
     "Schedule": 0,
5
     "TxRxFlag": 1,
6
     "ForwardingCapability": 0,
7
     "Contacts": [
8
9
       {
         "UserID": "0",
10
         "Type": "15 =n.a.",
11
         "Latitude": "-89.999001",
12
13
         "Longitude": "0",
         "Depth": "0.000000",
14
         "Speed": "0.000000",
15
         "Heading": "180",
16
17
         "NavigationalStatus": "15 = Undefined/default"
       },
18
       {
19
         "UserID": "1073741823",
20
         "Type": "9 = Bottom node",
21
         "Latitude": "-89.6485",
22
         "Longitude": "-0.351552",
23
         "Depth": "0.000000",
24
         "Speed": "0.000000",
25
         "Heading": "180",
26
         "NavigationalStatus": "0 = Under way, using engine"
27
       }
28
     ]
29
30 }
```



12.3.3 Class User Id: 016 NATO JANUS reference

Refer to NATO Janus Reference implementation for description of the application types and the fields in the NATO Janus Reference Class ID. This Class is used for underwater chat applications, or for transmission of other short messages. Application Type 0 does not have a CRC to ensure delivery, while ApplicationType 001 validates the message with a CRC16. Application Type 0

```
1 {
2     "ClassUserID":16,
3     "ApplicationType":0.
```

```
"ApplicationType":0,
3
    "StationID": "4",
4
5
    "MobilityFlag": "1",
    "ForwardingCapability": "1",
6
7
    "DestinationID": "0",
    "ParameterSetID":"0",
8
    "Payload_Size":"16",
9
10
    "Payload": {"Data": [49,50,51,52,53,54,55,56,57,48,49,50,51,52,
```

Application Type 1

53,54]}

11 }

```
1 {
2
    "ClassUserID": 16,
3
    "ApplicationType": 1,
    "StationID": "4",
4
    "MobilityFlag": "1",
5
    "ForwardingCapability": "1",
6
    "TxRxFlag": "1",
7
    "AckRequest": "1",
8
    "DestinationID": "0",
9
    "ParameterSetID": "0",
10
11
    "Payload_Size": "16",
    "Payload": {"Data": [ 49,50,51,52,53,54,55,56,57,48,49,50,51,
12
        52,53,54]}
13 }
```

13 Phorcys Operation

13.1 Phorcys System Configuration

Phorcys is a configurable underwater acoustic modem supporting flexible modulation, addressing, and security parameters. This chapter describes the pshell interface commands and the waveform reference tables required to configure and operate the modem.

All system variables described in Table 13.1.2 can be queried or set at runtime via the commands:

- get <var> returns the current value
- set <var> updates the value

13.1.1 Transmission Primitives

The modem can be instructed to transmit a Phorcys packet in two equivalent ways:

- Alias command: phorcys <MS> <string>
- · JSON command:

```
transmitJSON {"PhorcysMS":<MS>, "Payload":{"Data":<string> or <data
array>}}
```

13.1.2 System Variable Summary

Variable	Type	R/W	Min	Max	Description
PHOR_Mode	int	R/W	0	1	Selects modulation band:
					0 (Stheno, 24kHz) or 1 (Euryale,
					10 kHz). Setting this variable auto-
					matically updates PHOR_Carrier.
PHOR_Carrier	int	R/W	5000	44000	Acoustic carrier frequency in Hz.
					Normally controlled by PHOR_Mode.
PHOR_PhyAddrTx	int	R/W	0	127	Transmit (remote) physical address.
PHOR_PhyAddrRx	int	R/W	0	127	Receive (local) physical address.



PHOR_SpCodeNo	int	R/W	0	7	Outer spreading-code index. Ad-
					vanced users may replace the
					default code set with a custom
					OuterCodeFile.dat in /opt/popoto.
PHOR_Version	int	R/W	0	1	Polynomial version selector.
PHOR_PCIS	int	R/W	0	1	Encryption enable (1 = on).
PHOR_Seed	int	R/W	0	16777216	Seed value used when encryption is
					enabled.

13.1.3 Short-Payload (SP) Waveform Specification

Table 13.2: PHORCYSv0 – Short Payload (SP) waveform specification summary.

MS		MS	bits		Payload	BT	Mod	Sthe	eno (8k	(Hz)	Eury	ale (4	κHz)
MS	b_3	b_2	b_1	b_0	(bits)			Raw	Eff	Dur	Raw	Eff	Dur
0	0	0	0	0	8	16	160S-QPSK	3000	200	40	1500	100	80
4	0	1	0	0	16	20	160S-QPSK	3000	364	44	1500	182	88
8	1	0	0	0	24	24	160S-QPSK	3000	500	48	1500	250	96
12	1	1	0	0	32	22	160S-QPSK	3000	640	50	1500	320	100
1	0	0	0	1	8	16	160S-QPSK	1500	167	48	750	83	96
5	0	1	0	1	16	20	160S-QPSK	1500	286	56	750	143	112
9	1	0	0	1	24	24	160S-QPSK	1500	375	64	750	188	128
13	1	1	0	1	32	22	160S-QPSK	1500	471	68	750	235	136
2	0	0	1	0	8	16	64-OS	750	125	64	375	63	128
6	0	1	1	0	16	20	64-OS	750	200	80	375	100	160
10	1	0	1	0	24	24	64-OS	750	250	96	375	125	192
14	1	1	1	0	32	22	64-OS	750	308	104	375	154	208
3	0	0	1	1	8	16	64-OS	375	83	96	188	42	192
7	0	1	1	1	16	20	64-OS	375	125	128	188	63	256
11	1	0	1	1	24	24	64-OS	375	150	160	188	75	320
15	1	1	1	1	32	22	64-OS	375	182	176	188	91	352

13.1.4 Long-Payload (LP) Waveform Specification

Table 13.3: PHORCYSv0 – Long Payload (LP) waveform specification summary.

MS		MS	bits		Payload	BT	Mod	Sth	eno (8k	(Hz)	Eury	yale (4	kHz)
1413	b_3	b_2	b_1	b_0	(bytes)			Raw	Eff	Dur	Raw	Eff	Dur
16	0	0	0	0	16	128	16OS-QPSK	3000	1103	116	1500	552	232
20	0	1	0	0	32	256	160S-QPSK	3000	1620	158	1500	810	316



24	1	0	0	0	64	512	160S-QPSK	3000	1803	284	1500	901	568
28	1	1	0	0	128	1024	160S-QPSK	3000	1910	536	1500	955	1072
17	0	0	0	1	16	128	160S-QPSK	1500	640	200	750	320	400
21	0	1	0	1	32	256	160S-QPSK	1500	901	284	750	451	568
25	1	0	0	1	64	512	160S-QPSK	1500	955	536	750	478	1072
29	1	1	0	1	128	1024	160S-QPSK	1500	985	1040	750	492	2080
18	0	0	1	0	16	128	64-OS	750	348	368	375	174	736
22	0	1	1	0	32	256	64-OS	750	478	536	375	239	1072
26	1	0	1	0	64	512	64-OS	750	492	1040	375	246	2080
30	1	1	1	0	128	1024	64-OS	750	500	2048	375	250	4096
19	0	0	1	1	16	128	64-OS	375	182	704	188	91	1408
23	0	1	1	1	32	256	64-OS	375	246	1040	188	123	2080
27	1	0	1	1	64	512	64-OS	375	250	2048	188	125	4096
31	1	1	1	1	128	1024	64-OS	375	252	4064	188	126	8128

The SP formats prioritize brevity and high integrity for command-and-control traffic (1–4 bytes). LP formats sacrifice some compactness in exchange for Reed–Solomon forward-error correction and payloads up to 128 bytes, reaching effective throughputs within two-thirds of the raw rate.

13.1.5 Distinguishing Phorcys from Popoto Modulation on Reception

You can tell the difference between a received Popoto message and a Phorcys message based on the header. With a Phorcys message, the header is all zeroes except for the first digit, which will indicate the Phorcys modulation you are receiving. Standard Popoto messages will never have this pattern.



14 OEM Interface Description

14.1 Popoto Digital Interface

14.1.1 Overview

The Popoto Digital Interface (PDI) is a single connector which provides access to the most commonly used interfaces in the Popoto Modem system. These interfaces include RS-232, RS-422, 10/100 Ethernet, Board On/Off control, and PPS input signal.

14.1.2 PDI Hardware Components

PDI is connected to using a Molex Microfit connector (P/N 0430251400) or equivalent. This connector is sold as a shell plus discrete pins. While Molex produces many different pins for use with the MicroFit series, the best pins for use with Popoto Modems are Molex part number 0462355001. These pins are gold plated, rated for 250 mating cycles, and have a low insertion force. They are suitable for use with 20-24Ga wire. These pins can be crimped using one of Molex hand crimp tools such as the 0638190000. Alternately, if the expense of the crimp tool is cost-prohibitive for small prototype or limited production runs, pre-crimped wires are available from suppliers such as Digikey.

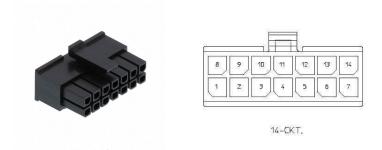


Figure 14.1: PDI User-Side Molex Connector. Interfacing to the PDI is accomplished with a Molex Microfit shell P/N 0430251400 and either Pre-pinned jumper wires, or Molex socket crimps.



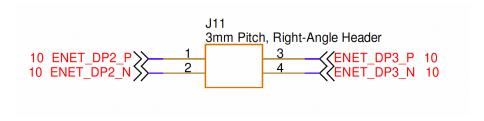


Figure 14.2: Additional PDI Connection to enable Gigabit Ethernet.

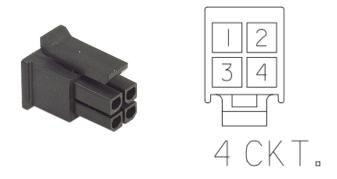


Figure 14.3: PDI Extended Gigabit User-Side Molex Connector. By Adding the 2 additional differential pairs, the Extended Gigabit connector enables gigabit ethernet to the PMM6081.

14.1.2.1 PDI Expanded Gigabit Ethernet

In addition to the standard Ethernet capabilities, the PMM6081 boasts an advanced feature for enhanced network performance. A separate 4-pin port (see Figure ?? and Figure ??) is included on the device, specifically designed to enable Gigabit Ethernet. This port, when used in conjunction with the 14-pin connector's four Ethernet pins, unlocks the full potential of Gigabit Ethernet speeds. This feature is particularly beneficial for applications that require high-speed data transfer, such as large file transfers, multichannel audio streaming, or rapid upgrades.



14.1.3 Electrical Connections

Figure 14.4 shows the electrical connections for the the PDI.

- Pins labeled RS-422 are UART signals that comply with EIA-RS-422 interface standards.
- Default UART signaling parameters are 115200N81.
- Pins labeled with RS-232 are UART signals that comply with EIA-RS-232 electrical interface standards.
- UART signaling parameters for the RS-232 port default to 115200N81.
- Power_OFF_N allows the unit to be powered off by connecting this signal to ground.
- ENET Signals are 10 100 Ethernet signals. As the Popoto board has on-board magnetics, these signals are standard 10 100 BaseT Ethernet signals.
- PpsInput is a 3.3V logic level input signal that is used for PPS input for clock discipline.

Table 14.1: PDI Components and Part Numbers

Part Number	Manufacturer	Description
0430251400	Molex	Microfit 14 position connector Receptacle 3.0MM
0430250400	Molex	Microfit 4 position connector Receptacle 3.0MM for Gigabit Extended PDI
0462355001	Molex	Microfit 20-24Ga gold plated, lubricated sockets
0638190000	Molex	Microfit Hand Crimp tool
0797580010	Molex/Digikey	Precrimped Microfit leads

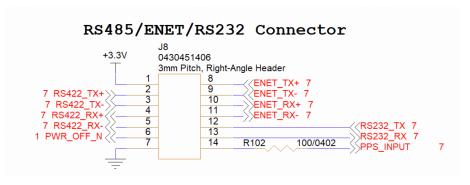


Figure 14.4: PDI Schematic connections.



Table 14.2: PDI Electrical Pinout

Pin Number	1/0	Pin Name	Notes
1	0	3.3V	3.3V out when unit is powered up
2	0	RS 422 Tx +	Connect to Rx+ on Host
3	0	RS 422 Tx -	Connect to Rx- On Host
4	I	RS 422 Rx+	Connect Tx+ on Host
5	I	RS 422 Rx-	Connect to Tx- on Host
6	I	PowerSwitch	Short to ground to power down unit
7	-	Gnd	Digital Ground
8	0	Ethernet Tx+	T568A Green White T568B Orange White
9	0	Ethernet Tx-	T568A Green T568B Orange
10	I	Ethernet Rx+	T568A Orange & White T568B Green & White
11	I	Ethernet Rx-	T568A Orange T568B Green
12	0	RS-232 TX	Connect RX on Host
13	1	RS-232 RX	Connect to Tx On Host
14	I	PPS Interrupt	PPS interrupt for optional time Sync Max Voltage 3.3V for PMM3511 5V for PMM5021

The PMM6081 provides an additional Connector (J11) to enable gigabit ethernet. To use the gigabit ethernet, wire the PDI port per table 14.2 and add the additional 2 differential pairs for the ethernet as shown below.

Table 14.3: Extended Gigabit PDI Electrical Pinout

Pin Number	I/O	Pin Name	Notes
1	0	Ethernet Diff Pair 2P	
2	0	Ethernet Diff Pair 2N	
3	1	Ethernet Diff Pair 3P	
4	1	Ethernet Diff Pair 3N	

14.1.4 Digital Interfaces

Popoto Modems have 3 additional digital interfaces beyond the PDI port. These interfaces are used to connect to external devices, or to provide alternate digital connection schemes for a host controller.



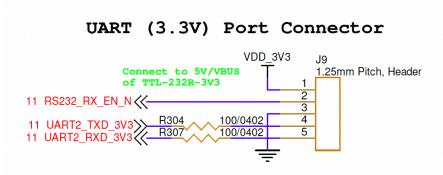


Figure 14.5: Popoto TTL UART Plug. This port allows 3.3V logic-level UART connections

14.1.4.1 TTL Uart

The TTL UART port is used for connecting Popoto to a local controller over a short distance. The TTL UART port is a 5 pin Molex picoblade connector. Figure 14.5 shows the schematic connections on the TTL-UART port. In order to enable the 3.3V uart port, pins one and 2 of J6 must be shorted together. Doing this disables the RS-232 level translator, and thereby disables the RS232 port on the PDI connector.

Table 14.4: Popoto TTL UART Parts

Part Number	Manufacturer	Description
0510210500	Molex	Picoblade 5 position connector Receptacle
0500798000	Molex	Picoblade 26-28Ga sockets
2002181900	Molex	HAND TOOL FOR PICO-BLADE 26-32AW
2149202214	Molex	Precrimped Picoblade 150mm 26Ga

Table 14.5: Popoto 3.3V Uart Port

Pin Number	1/0	Pin Name	Notes
1	Р	V+	+3.3V
2	I	V+	RS232_EN_N Tie this pin high (short to pin 1) to enable the 3.3V UART port
3	G	GND	Ground
4	0	UARTO_TXD	Popoto UART Output
5	1	UARTO_RXD	Popoto UART Input

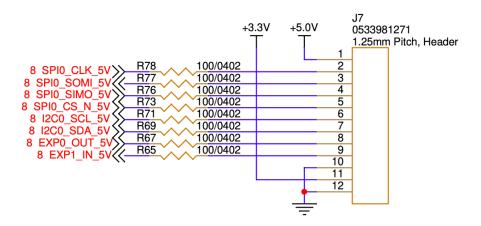


Figure 14.6: Popoto Expansion Header. This connector allows access to I2C, SPI and General purpose I/O from the Popoto Modem.

14.1.4.2 Digital Expansion Header

Figure 14.6 shows the schematic for the Digital Expansion Header. This header enables peripheral access when applications execute directly on the Popoto Modem's System on a Chip (SOC). It features general-purpose input/output (GPIO) pins, along with SPI and I2C interfaces. Furthermore, signals from this connector are utilized for Push-to-Talk (PTT) and volume control within SSB mode. The connector is a 12-pin Picoblade type, and the necessary components are listed in Table 14.6



Table 14.6: Popoto Expansion Header Parts

Part Number	Manufacturer	Description
0510211200	Molex	Picoblade 12 position connector Receptacle
0500798000	Molex	Picoblade 26-28Ga sockets
2002181900	Molex	HAND TOOL FOR PICO-BLADE 26-32AW
2149202214	Molex	Precrimped Picoblade 150mm 26Ga

14.1.4.3 0056 Analog Board GPIO Expansion Header

On the PMM6081 and PMM5544 boards shipped with the 068-0056-xx version analog boards, a GPIO header is provided for additional interface possibilities. The connector is found at J5 along the edge of the board and is a Molex 12 pin Picoblade connector. Refer to 14.7 for part numbers for this part, and refer to 14.7 for the schematic diagram. This pins are accessible from the Linux GPIO subsystem.

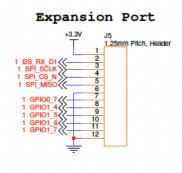


Figure 14.7: Popoto 0056 Board Expansion Header. This connector allows access to I2C, and General Purpose I/O (GPIO) from the Popoto Modem.

Table 14.7: 0056 Analog Board GPIO Expansion Header

Part Number	Manufacturer	Description
0510211200	Molex	Picoblade 12 position connector Receptacle
0500798000	Molex	Picoblade 26-28Ga sockets
2002181900	Molex	HAND TOOL FOR PICO-BLADE 26-32AW
2149202214	Molex	Precrimped Picoblade 150mm 26Ga



14.1.4.4 MCU Expansion Header

The MCU Expansion header allows interface to the Popoto wake up processor. The Popoto wakeup processor is a mixed signal device. This device has Analog inputs, as well as digital I/O at 1.8V. This port is expecially useful for monitoring signals while the main processor is in Deep sleep mode. Use of this port requires special firmware support from Popoto Modem. If you require access to these signals for your application, please reach out to info@popotomodem.com.

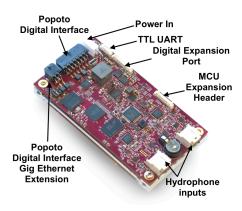


Figure 14.8: PMM6081 Digital Board Connector Locations

14.1.4.5 Micro USB Port

The Micro USB port is a standard USB OTG port as configured by the Popoto Modem Linux Operating system. This port is extremely flexible, allowing both host and peripheral connections. If you have need for the Micro USB port, please contact Popoto Modem at info@popotomodem.com.

14.2 PMM6081 Specific Interfaces

14.3 PMM6081 Specific Interfaces

14.3.1 Power

Power is provided to the PMM6081 OEM Boardset via connector J1 on the Digital Board. This connector is a 2 pin Molex MiniFit Jr connector, and has provisions for V+ pin and Ground pin. Acceptable input voltages are between 8.5 and 36 Volts. Table 14.9 and Figure 14.9 show the connections required for powering the PMM6081. Table 14.8 shows the parts required for attaching to the power connector on the PMM6081. Two option are given: Using sockets and a crimp tool for larger production runs, or ordering precrimped wires from Digikey for smaller prototype/production runs.

Table 14.8: PMM6081 Power Plug Components

Part Number	Manufacturer	Description
0039013022	Molex	MiniFit Jr 2 position connector Receptacle
0039000182	Molex	MiniFit Jr 18-24Ga gold plated, sockets
0638190901	Molex	Minifit Hand Crimp tool
0039000038-12-R9	Molex/Digikey	Precrimped MiniFit 12in 18Ga Red
0039000038-12-K9	Molex/Digikey	Precrimped MiniFit 12in 18Ga Black

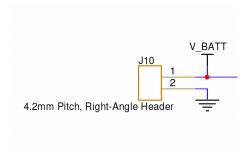


Figure 14.9: PMM6081 Power Schematic.

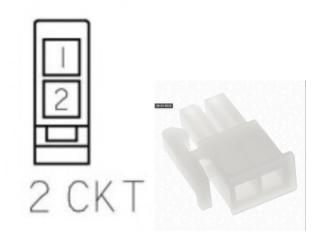


Figure 14.10: PMM6081 Power Connectors and pinout.

Table 14.9: PMM6081 Power Connector Pinout

Pin Number	I/O	Pin Name	Notes
1	Р	V+	8.5-36 Volts 150 Watts
2	G	GND	Ground

14.3.2 Analog Interfaces

14.3.2.1 Hydrophone Interfaces for PMM6081 Digital Board

The PMM6081 Digital Board features two 10 Pin Molex iGrid connectors for hydrophone interfaces. These connectors are designated as J1 and J2, each providing different levels of gain for hydrophone channels.



14.3.2.2 J1: High Gain Hydrophone Connector

The J1 connector provides a High Gain 43dB amplification suitable for hydrophone channels. The pinout configuration for the J1 connector is as follows:

Pin	Function	Description
1	AIN4P	Analog input 4 Positive
2	AIN4N	Analog input 4 Negative
3	AIN3P	Analog input 3 Positive
4	AIN3N	Analog input 3 Negative
5	AIN2P	Analog input 2 Positive
6	AIN2N	Analog input 2 Negative
7	AIN1P	Analog input 1 Positive
8	AIN1N	Analog input 1 Negative
9	VSYS5V	5V output
10	GND	Ground

Table 14.10: J1 High Gain Hydrophone Connector Pinout, AINxP and AINxN are the positive and negative inputs for a given hydrophone channel.

14.3.2.3 J2: Low Gain Hydrophone Connector

The J2 connector provides a Low Gain (12dB) for hydrophone connections. The pinout configuration for the J2 connector is as follows:

Pin	Function	Description
1	AIN8P	Analog input 8 Positive
2	AIN8N	Analog input 8 Negative
3	AIN7P	Analog input 7 Positive
4	AIN7N	Analog input 7 Negative
5	AIN6P	Analog input 6 Positive
6	AIN6N	Analog input 6 Negative
7	AIN5P	Analog input 5 Positive
8	AIN5N	Analog input 5 Negative
9	VSYS5V	5V output
10	GND	Ground

Table 14.11: J2 Low Gain Hydrophone Connector Pinout, AINxP and AINxN are the positive and negative inputs for a given hydrophone channel.

14.3.2.4 Hydrophone Connectors Part Number Table



Component	Manufacturer Part Number
Crimps	Molex 5016471000
Housing	Molex 5016461000

Table 14.12: Manufacturer Part Number for iGrid Pins and Shells



Figure 14.11: The PMM6081 Analog board

14.3.3 Analog Board

The remaining analog interfaces to the PMM6081 can be found on the analog board. This board has the large round pot-core inductor, and can be seen in Figure 14.11

14.3.3.1 Transducer

The Transducer is connected to the Popoto Modem by a 6 pin Molex MiniFit Jr connection, labelled J9. This connector provides access to the TPA output and provides positions for series and parallel matching networks. In its default configuration with the Popoto 25-30Khz transducer, no additional matching networks are required. See Figures 14.12 and 14.13 for the pinout for this connector.



Place Series Matching network from Pin 1 to 2.
Short with a shorting loop if no match needed
Place parallel Matching network from 6 to 5.
Connect transducer to pins 6 (inner ring) and 4 (Outer Ring)

Figure 14.12: The PMM6081 Transducer connector schematic.



Figure 14.13: PMM6081 Transducer connector and pinout.



Table 14.13: PMM6081 Transducer Connector Pinout

Pin Number	1/0	Pin Name	Notes
1	I	TR_SW_A	Input to the TR Switch. Connect to Pin 2 with series matching network
2	0	POWER_AMP_OUT	Connect to Pin 1 with series Matching network
3	0	POWER_AMP_OUT	Same signal as Pin 2
4	0	TRANSDUCER_OUT_P	Positive transducer connection. Connect to Pin 5 with parallel matching network if needed
5	G	GND	Ground
6	0	TRANSDUCER_OUT_N	Negative transducer connection.

Table 14.14: PMM6081 Transducer Plug Parts

Part Number	Manufacturer	Description
0039012060	Molex	MiniFit Jr 6 position connector Receptacle
0039000182	Molex	MiniFit Jr 18-24Ga gold plated, sockets
0638190901	Molex	Minifit Hand Crimp tool
0039000038-12-R9	Molex/Digikey	Precrimped MiniFit 12in 18Ga Red
0039000038-12-K9	Molex/Digikey	Precrimped MiniFit 12in 18Ga Black

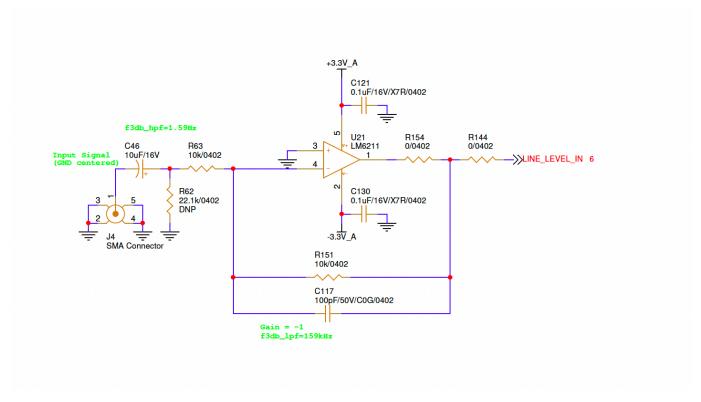


Figure 14.14: PMM6081 Analog input schematic excerpt. This circuit conditions the input signal and is used for SSB voice input or for applications providing line level analog input.

14.3.3.2 Analog In

The PMM6081 Analog board has provisions for analog input via an SMA connector mounted on the analog board. This connector is used for SSB voice input, as well as for applications that have line level outputs of transducer signals. The Analog input port drives an adjustable gain amplifier to allow for level matching between different equipment. An excerpt of the schematic, showing the input amplifier topology is shown in Figure 14.14. Note that for the analog input to operate, the J5 and J1 jumpers must be installed and J2 should be installed in the 2-3 position to connect the input to SMA. The input impedance of the SMA connection is 22.1 K. The input gain is adjustable by R13 yield a gain spanning from 1/2 to 25. The A/D input spans +/- 2.5 volts.

14.3.3.3 Analog Out

The PMM6081 Analog board has provisions for analog output via an SMA connector mounted on the analog board. This connector is used for SSB voice output, as well as for applications that utilize offboard power amplifiers. The Analog output port drives a fixed gain amplifier to provide buffering and level setting of the output. An excerpt of the schematic, showing the input amplifier topology is shown in Figure 14.15. The full scale output voltage on the SMA

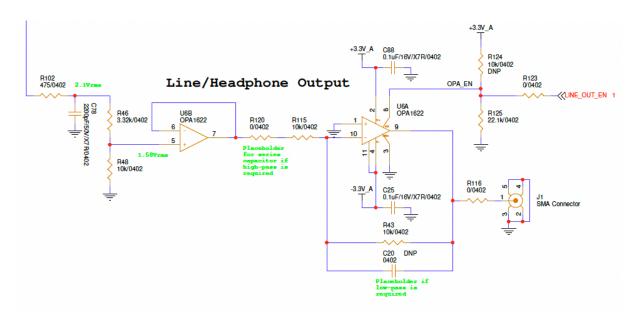


Figure 14.15: PMM6081 Analog output schematic excerpt. This circuit provides a +/- 3.3V signal to the SMA output port. This signal is used for the head-phones output during SMA voice mode, or for a diagnostic port or to drive an external power amplifier if needed.

is +/- 3.3 Vpp. The maximum output current is 145mA and is ground centered. The 3dB cut off point of the output low-pass filter is 152KHz.

15 Battery Multiplexer

15.1 Battery Multiplexer

15.1.1 Overview

The Popoto Battery Multiplexer is a hardware component that allows use of multiple Lithium Ion battery packs in parallel. The Battery Multiplexer draws power from the most fully charged battery, and will draw that battery down until it is below the charge level of another battery, at which point it will seamlessly switch over to that one. Similarly, it allows bank charging of the batteries, charging the most drained battery first, and then switching to the others as they charge. Charging is accomplished with the standard Popoto Lithium Ion Charger. For wired installations, this will require an adapter cable from

15.1.2 Power Connectors

Table 15.1: Battery Multiplexer Power In and Out Plug Components

Part Number	Manufacturer	Description
0039013042	Molex	MiniFit Jr 4 position connector Receptacle
0039000182	Molex	MiniFit Jr 18-24Ga gold plated, sockets
0638190901	Molex	Minifit Hand Crimp tool
0039000038-12-R9	Molex/Digikey	Precrimped MiniFit 12in 18Ga Red
0039000038-12-K9	Molex/Digikey	Precrimped MiniFit 12in 18Ga Black

Table 15.2: Battery Mux Power Connector Pinout

Pin Number	I/O	Pin Name	Notes
1	Р	V+	12-29 Volts 150 Watts
2	Р	V +	12-29 Volts 150 Watts
3	G	GND	Ground
4	G	GND	Ground



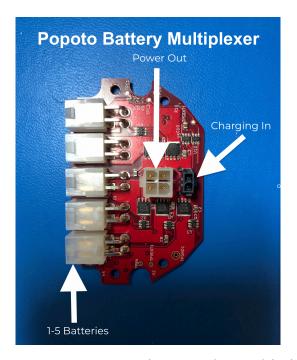


Figure 15.1: Popoto Battery Mux Board. Power is provided by 1-5 6S Lithium Ion Batteries provided on the Molex MiniFit Jr 4 pin connectors on the left. Power is drawn from the Minifit Jr 4 port connector on the top, and charging is accomplished by connecting the charger to the 2 port microfit connector on the right side of the diagram.

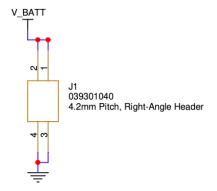


Figure 15.2: Battery Mux: Battery in Power out Schematic.

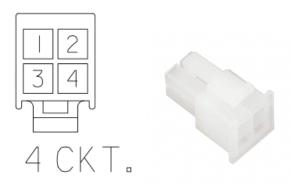


Figure 15.3: PMM5021 Power Connectors and pinout.



CHARGING PORT CC/CV 25.2 V

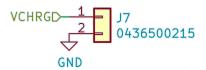


Figure 15.4: Battery Mux: Charging Port Schematic. Use a constant current/constant voltage lithium ion charger for 6S Battery Packs. (1.875A)

15.1.3 Charging Connectors

The charging connector, J7, on the Battery Multiplexer (see Figure 15.4) will charge all battery packs in parallel using the standard Popoto CC/CV charger.

Table 15.3: Battery Mux Charging Port Part Numbers

Part Number	Manufacturer	Description
0436500214	Molex	Microfit 2 position connector Receptacle 3.0MM
0462355001	Molex	Microfit 20-24Ga gold plated, lubricated sockets
0638190000	Molex	Microfit Hand Crimp tool
0797580010	Molex/Digikey	Precrimped Microfit leads

16 Popoto Interface Board

16.1 Popoto Interface Board

16.1.1 Overview

The Popoto interface board provides a simple way to connect a host computer to the Popoto Modems. The Popoto Interface board connects to the modem via the PDI, and the PC connects to the Popoto Interface Board via USB and ethernet.

16.1.2 PDI Connector J10

The PDI connector connects pin for pin to the PDI connector on the Popoto Modem. Pin 1 of J10 connects to pin 1 of the PDI, pin (J10) 2 to PDI pin 2, ...

16.1.3 USB Port (J2)

The Popoto Interface board connects via USB to the host computer. The USB Port enumerates as 2 serial ports. These ports will typically show up in Windows as COMn and COMn+1, and in Linux as TTYUSBn and TTYUSBn+1. Both serial ports are enabled on all M2000/M6000 devices. S1000 devices are ordered with either ethernet, RS-232 or RS-422. On these devices, only the enabled interface will be available.

Table 16.1: USB Ports

Port Number	Serial Protocol	Default terminal
PORT n+0	RS-422	Pshell
PORT n+1	RS-232	Linux Terminal

16.1.4 Ethernet Port (J1)

The Ethernet port (J1) provides a standard RJ-45 ethernet connection to the Popoto Modem. This port is active on all M2000 devices, and on S1000 devices that are configured for ethernet.



16.1.5 Switch SW1 and Jumper J9

SW1 provides an illuminated power on/off switch. To enable this switch jumper J9 must be installed. Note that the illumination of the switch will be delayed by 3-5 seconds after turn-on of the Popoto board.

16.1.6 PWRDN LED (J8)

The PWRDN LED connector is a 4 pin Molex microfit connector that allows the user to supply a remote illuminated switch. In order to use the remote switch, Jumper J9 must be removed.

Table 16.2: PWRDN LED Connector Pinout

Pin	I/O	Signal
1	Р	MODEM 3.3V output voltage
2	1	PWDN N Signal: Connect to GND to power down
3	0	LED voltage.
4	Р	GND

16.1.7 SSB Connections

The following connectors are used for Single Side Band Voice with the Popoto PMM5021 based devices. In order to use SSB voice, Connections J3, J4, J5, J6, and J7 are needed for SSB voice input and control.

Table 16.3: SMA Ports J6 and J7

Port Number	I/O	Signal	PMM5021 connection
J6	1	SSB Headphone	PMM5021 Analog Port J4
J7	0	SSB Microphone	PMM5021 Analog Port J3

Table 16.4: SSB Control Port J3

Pin	1/0	Signal	Operation
1	I	VOL+	Momentarily Ground to increment Volume
2	-	GND	
3	I	VOL-	Momentarily Ground to decrement Volume
4	I	PTT0	Momentarily Ground at the same time as PTT1 for Push to talk
5	-	GND	
6	I	PTT1	Momentarily Ground at the same time as PTT0 for Push to talk



Table 16.5: Headphone/Microphone Connector J5

Pin	1/0	Signal
1	0	Left Headphones
2	0	Right Headphone
3	1	Microphone
4	Р	GND

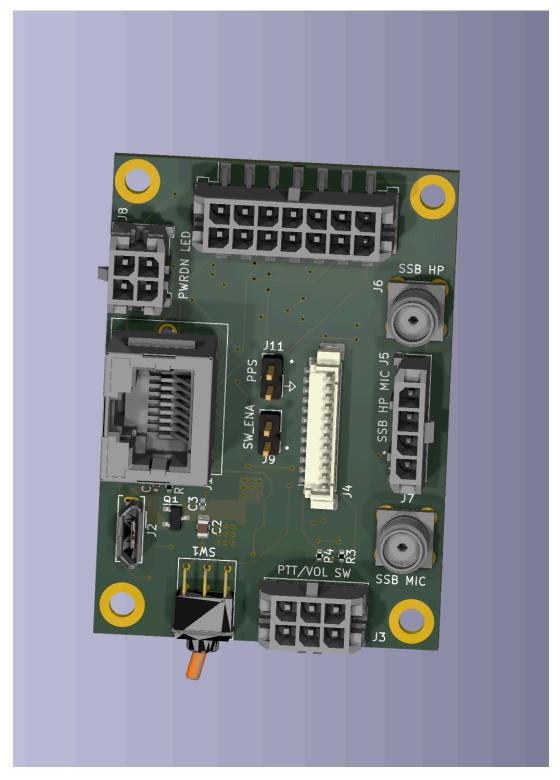


Figure 16.1: Popoto Interface Board

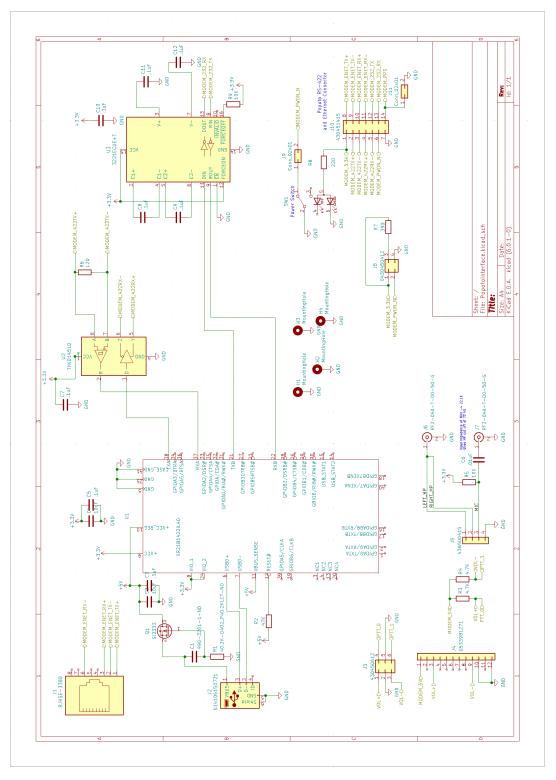


Figure 16.2: Popoto Interface Board Schematic



17 Upgrading the Firmware

17.1 Introduction

Firmware updates are accomplished through the ethernet port. As an overview the process involves three steps:

- 1. SCP an update tar file
- 2. Extract the tar file
- 3. Run the update shell script

17.1.1 Details on how to update the firmware

Requirements:

- · Laptop or Desktop Computer
- · Network Connection
- · Pshell connection (Rs 422)
- Secure Shell/Copy utility
- Update_<version_num>.tar

17.2 Upload Procedure

Note: By default the Popoto boardset is shipped without a root password. the examples below all remote operations happen without password entry. If you have added a root password to your system, please enter the password when prompted by the SSH and SCP utilities in the steps below.

Step 1

Connect Popoto to ethernet connection.



Step 2

Determine or Set the Popoto IP Address From the pshell issue getIP

```
Popoto-> getIP
```

```
IPv4 Address: eth0 Link encap:Ethernet HWaddr 2E:A4:4D:D2:40:82 inet addr:10.0.0.232 Bcast:10.255.255.255 Mask:255.0.0.0 inet6 addr: 2603:3005:82a:8000:2ca4:4dff:fed2:4082\%71/64 Scope:Global inet6 addr: fe80::2ca4:4dff:fed2:4082\%71/64 Scope:Link UP ...
RX packets:639 errors:0 dropped:0 overruns:0 frame:0 TX packets:15...
RX bytes:57888 (56.5 KiB) TX bytes:26702 (26.0 KiB) Interrupt:33
```

In this example the IP address is 10.0.0.232.

To change the IP address of the Popoto, issue the setIP command from pshell.

Step 3

Confirm connection to the Popoto's network connection using the ping command from your local computer's command window.

```
ping 10.0.0.232
PING 10.0.0.232 (10.0.0.232): 56 data bytes
64 bytes from 10.0.0.232: icmp\_seq=0 ttl=64 time=0.853 ms 64 bytes from...
```

Step 4

Using a secure copy utility, such as OpenSSH's scp, located on your local computer, copy the update file to the Popoto's root directory

```
scp Update_2.7.0.tar root@10.0.0.232:/
```

Step 5

Shell into the Popoto, using an ssh utility

```
ssh root@10.0.0.232
```

You should receive a prompt like:

```
root@popoto:~#
```

Step 6

From the root@popoto: prompt, change directories to the root directory, and untar the update file previously uploaded.

```
root@popoto:~# cd /
root@popoto:/# tar xvf Update\_2.6.0.tar
```

This will create (or overwrite) the following 2 files

- Update.sh
- Update.tgz



Step 7

Execute the Update shell command to install the newest version.

```
root@popoto:/# ./Update.sh
```

This will generate the output similar to.

```
Update.sh
Version.txt
boot/
boot/dolphin.dtb
home/
home/root/
home/root/popoto.py
home/root/pshell
home/root/popoto\_app
lib/
lib/firmware/
lib/firmware/platform.out
pshell.init
version.txt
Connection to 10.0.0.232 closed by remote host. Connection to 10.0.0.232 closed.
```

At this point the Popoto unit will reboot, and come up with the new firmware version installed.

In the pshell window (RS-422) you should end up at a prompt that says

Welcome to the Popoto modem Shell! Communicating Naturally Popoto-> {"Info ":"Popoto Modem Version <New Version Number and informational tag> "}

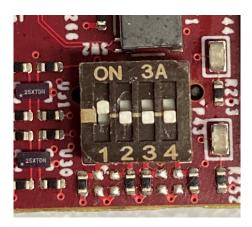


Figure 17.1: PMM6081 Switch Position used for running program command

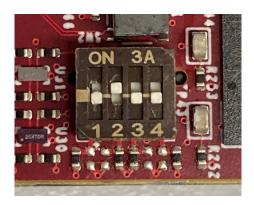


Figure 17.2: PMM6081 Switch Position used for running program command

17.3 Updating Image using UUU

17.3.0.1 Instructions for for Ubuntu 22.04

To reprogram the EMMC flash on a PMM6081 board follow the procedure below:

First set the dip switches as shown in 17.2 and run the following command:

```
sudo uuu -v -b emmc_all ./imx-boot ./pmm6081-image-pmm6081.wic
```

To program a board on a specific USB port, use the -m argument, followed by the USB port:

```
sudo uuu -m 1:1 -v -b emmc_all ./imx-boot ./pmm6081-image-pmm6081.wic
```

When done, reset the dip switches to the:

NOTE: This will be slow! 30 min, follow instructions below to get a faster update utility



17.3.0.2 Fast UUU Upload

This section covers the procedure and tools required to program a compressed archive. These archives are distributed as a wic.bz2 file along with.a bmap. Many distributions do not include a pre-built uuu, part of the mfg-tools package, capable of flashing a bz2 file. So we will need to build one from source.

17.3.0.3 Setup

We will obtain the proper version mfgtools source from the following website and commit hash

```
https://github.com/nxp-imx/mfgtools commit hash: `dc3ca54`
```

Using the following procedure obtain the source code from the repository.

```
mkdir ~/fast_uuu
cd ~/fast_uuu
git clone https://github.com/nxp-imx/mfgtools.git
cd mfgtools
```

Install all required dependencies for the mfgtools build.

 $\verb|sudo| apt-get| install \ libusb-1.0-0-dev| \ libbz2-dev| \ libzstd-dev| \ pkg-config| \ cmake| \ libssl-dev| \ g++| \ zlibzstd-dev| \ pkg-config| \ cmake| \ libssl-dev| \ g++| \ zlibzstd-dev| \ pkg-config| \ cmake| \ libssl-dev| \ g++| \ zlibzstd-dev| \ pkg-config| \ cmake| \ libssl-dev| \ g++| \ zlibzstd-dev| \ pkg-config| \ cmake| \ libssl-dev| \ g++| \ zlibzstd-dev| \ pkg-config| \ cmake| \ libssl-dev| \ g++| \ zlibzstd-dev| \ pkg-config| \ cmake| \ libssl-dev| \ g++| \ zlibzstd-dev| \ pkg-config| \ cmake| \ libssl-dev| \ g++| \ zlibzstd-dev| \ pkg-config| \ cmake| \ libssl-dev| \ g++| \ zlibzstd-dev| \ pkg-config| \ cmake| \ libssl-dev| \ pkg-config| \ pkg-c$

Once this completes, we will execute the build commands

```
cmake . && make
```

After the build is complete, copy the executable from the uuu subdirectory to your user software folders:

```
cd ~/fast_uuu/mfgtools/uuu/
sudo cp uuu /usr/bin/uuu
sudo cp uuu /usr/local/bin/uuu
```

This enables using the uuu command from any directory.

17.3.1 Updating with fast uuu

To update using the new fast uuu, use the following command:

```
sudo uuu -bmap -v -b emmc_all /path/to/imx-boot path/to/pmm6081-image-pmm6081.wic.bz2
```

NOTE: In order for fast flashing to work, you must use the .wic.bz2 file.



18 Network Settings

18.1 Adjusting Network Settings on Popoto Debian

The network on the Popoto Modem operating system is configured to use a static IP address and a MAC address that is randomly generated when the system boots. To change the IP address, you can use the pshell's setIP command (see in Pshell Command Reference below).

In the Debian OS, the file /etc/init.d/staticip is used to set the static IP address of the modem. The file should look like this on the inside:

```
#!/bin/sh
NAME=staticip
DESC="Configure EthO Static"
case "$1" in
  start)
        echo -n "$DESC: "
        /sbin/sysctl -w net.ipv4.igmp_max_memberships=10
        /sbin/ifconfig eth0 10.0.0.237
        /sbin/ifconfig eth0 up &
        /bin/mount -a
  stop)
        echo -n "Stopping $DESC: "
        /sbin/ifdown eth0
  restart|force-reload)
        ;;
esac
exit 0
```

To set a static MAC address, you should modify this file such that the MAC address is specified immediately after the IP address:

```
#!/bin/sh
NAME=staticip
```



```
DESC="Configure EthO Static"
case "$1" in
  start)
        echo -n "$DESC: "
        /sbin/sysctl -w net.ipv4.igmp_max_memberships=10
        /sbin/ifconfig eth0 10.0.0.237
        /sbin/ifconfig eth0 hw ether 02:XX:XX:XX:XX
        /sbin/ifconfig eth0 up &
        /bin/mount -a
        ;;
  stop)
        echo -n "Stopping $DESC: "
        /sbin/ifdown eth0
  restart | force-reload)
        ;;
esac
exit 0
```

The MAC address should begin with 02: or 06: and contain randomly-generated bytes (in hexadecimal format, from 00 to FF) in place of the XX's above.

19 Diagnostics

The FOAM architecture has built in logging support to enable diagnostics and debug of any in field problems. The logging consists of a rolling file based log file, along with options for saving the passband PCM data. The log file is useful for determining message flow and state transitions, and the PCM passband logging is useful for diagnosing signal processing and signal quality issues.

19.1 Popoto log

19.1.1 Introduction

The Popoto.log is a diagnostic logfile which is updated as the Popoto_app runs, keeping track of message and logic flows within the system. This logfile has the following properties.

- The Log file is Leveled: All logs are assigned a severity level in the code, and by changing the output filter, only logs greater than a set severity level are displayed.
- The log file is Timestamped: Each log message is tagged with a millisecond accurate realtime clock stamp, as well as a PCM Count timestamp.
 The Realtime clock is useful for comparing transmit to receive times between units, and the PCM clock gives an indication of when a message is displayed with respect to reception or transmission of acoustic messages.
- The Logfile is Rolling: Each time the Popoto app is started, the previous log file is added to a list of 10 preceding log files. So that in the Popoto_app directory we have Popoto.log, Popoto.log.1, Popoto.log.2 through Popoto.log.10 where Popoto.log is the current logfile, and Popoto.log.1 is the most recent log file preceding this logfile.

19.1.2 Location

On the target hardware the Popoto.log file is found in the /home/root directory. On the PC-Based Linux simulation, the Popoto.log is found in the /tmp directory. In order to allow more than one Popoto image to run on a pc, the base-port number is appended to the Popoto.log filename. /tm-p/Popoto.log.17000 Corresponds to a Popoto image run at a base port of



17000 Or /tmp/Popoto.log.18000 Corresponds to a Popoto image run at a base port of 18000. For example:

19.1.3 Logging Levels

Each log message is assigned a logging level from 0 to 7. Lower log levels are more severe, and higher log levels are increasing details. follows:

- 0. logERROR
- 1. logWARNING
- 2. logINFO
- 3. logDEBUG
- 4. logDEBUG1
- 5. logDEBUG2
- 6. logDEBUG3
- 7. logDEBUG4

The log levels are defined as By default all log messages with a logging level of logINFO or lower are written to the log. To increase or decrease the log level issue the SetValue LoggingLevel int <Level> 0 command Or from the pshell:

setvaluei LoggingLevel <level>

To get the current logging level, issue the GetValue LoggingLevel int 0 command, Or from the pshell:

getvaluei LoggingLevel

19.1.4 MSM Logs

The Modem State Machine has a built in logging mechanism that can be connected to the Popoto.log file. This allows the user to see events, and state transitions as the modem state machine operates. To enable the MSM logs, send the command EnableMSMLogs. Or, from the pshell: enablemsmlogs To disable logs, send the DisableMSMLogs command. Or from the pshell: disablemsmlogs

19.2 PCM Logging

19.2.1 Introduction

The Popoto system incorporates a means for logging the inbound PCM signals as seen on the A/D. This logging mechanism is useful for diagnosing system problems. Since the



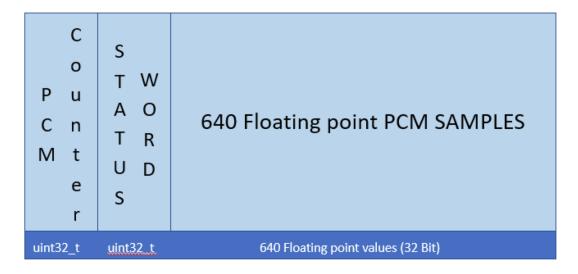


Figure 19.1: Format of a single PCM Log Packet. These packets are transmitted on the TCP PCM Recording socket.

PCM signals that are logged are exactly what is presented to the Demodulator, it possible to "re-run" a test condition, to determine the signal parameters or noise environment. Two methods of logging are provided to the user:

- 1. TCP Socket Based Logging
- 2. Target File Logging

Each of these methods produces a data stream of packets that are formatted as follows:

Count Data type Description 1 PCM Counter. Gives the current 32 Bit unsigned int PCM counter. Should increase by 640 each frame. A skip in this count indicates lost data Status Word. Currently 0 indi-1 32 Bit unsigned int cates High Gain Channel, and 1 indicates low gain channel PCM Samples. All normalized 640 32 Bit Floating point to High Gain Receive Level.

Table 19.1: PCM Packet Format

19.2.2 Socket based PCMLogs

The Popoto system opens a TCP Server at baseport+2 (17002 default) which continually streams PCM Packets as described above. Both the Popoto.py





Figure 19.2: The PCM Packets are sent one after the other to the TCP Socket or to the Target log file

and Popoto.m interface classes have functions to read that socket and log the data to the local pc.

From the pshell

recordstart <Filename> local

will start the recording in the current working directory. To stop the recording: From the pshell:

recordstop

19.2.3 Target File based PCM Logs

The Popoto system provides a command to store the received pcm locally. Using the

RecordFileStart <FileName>

command, the user can start logging data to the local SD card.

If the filename is specified without a path, it will be recorded in /home/root.

paths should be complete paths. Wild cards are not parsed.

From the pshell:

recordstart WaterTestCapeCodCanal2_20.pcm

will begin a recording on the Popoto unit in the /home/root directory To stop the recording, a RecordFileStop command can be sent on the command socket. Or, from the pshell:

recordstop

A Matlab utility: rPCMData() is provided in the test/MATLAB GUI directory. This utility can read a file logged by the pshell or by the Target recording, and returns 3 arrays, the PCM data, the PCM Counter(sequence number) and the status word.

19.2.4 Notes

It is important to realize that PCM recording generates data very quickly. Each packet is

 642×4

Bytes long, and 160 packets are generated per second. This results in a file that grows at 410,810 bytes per second, or roughly 1.5 G Bytes per hour.



19.3 pshell Logging

The pshell provides a log of all commands and status responses for a pshell session. This is useful for capturing the results of tests, or to evaluate the responses and commands that were run. pshell logs are size-limited, and rotate. These logs can be found in the directory that the pshell was run in.



20 Automatic PCM Error Logging

The Popoto Application includes a diagnostic feature called **Automatic PCM Error Logging**, designed to support offline analysis of signal quality during transmission failures.

20.1 Overview

When this feature is enabled, the Popoto App continuously maintains a rolling buffer of the most recent 30 seconds of PCM passband data. If a transmission fails with either a **CRC Error** or a **Ranging Error**, the application will automatically dump this buffered audio into a timestamped 'wav' file.

These recordings are intended for developers and engineers to use in post-mission analysis, regression testing, or reproducing field issues under known acoustic conditions.

20.2 How to Enable

This feature is controlled at runtime via the 'pshell' interface.

- set LogPcmEnable 0 Disables PCM error logging (default)
- set LogPcmEnable 1 Enables automatic logging of recent PCM data upon error

No additional configuration is required. When enabled, the Popoto App will write '.wav' files automatically when a relevant error is detected.

20.3 Logging Details

- The recorded files are mono standard WAV format at the application sample rate and timestamped at the moment of error detection.
- Only raw PCM passband audio is captured decoded messages or payload content are not included.



- Logging is triggered specifically by **CRC Errors** and **Ranging Errors**.
- The PCM buffer is always 30 seconds long.

21 Pshell Command Reference



pshell Command: Rx

Description:

Rx Receive packets and format the output for test purposes. Continues to run until a key is hit.

Invocation

Rx [Verbose Flag]
Verbose Flag = 1 Output SNR and Doppler info

Examples

Rx

Enter test receive in quiet mode

Rx 1

Enter test receive in verbose mode.



pshell Command: chat

Description:

This command puts Popoto into a character chat mode, In chat mode, the user can type characters, and they will be transmitted when one of 2 conditions occur. 1) the user stops typing for a period of time greater than ConsoleTimeoutMS, or 2) a string of characters greater in length than ConsolePacketBytes is typed. ConsoleTimeoutMS and ConsolePacketBytes are Settable Variable parameters.

Invocation

chat

Examples

chat
ctrl-] to exit



pshell Command: configure

Description:

This api configures the modem for different modulation schemes. It is used to allow switching between major operating modes such as Janus and default Popoto modes. Invocation of this command issues a reboot, after which the modem is in the new mode of operation.

Invocation

configure <MODE>

Examples

configure Janus to setup Janus mode configure Popoto to setup Popoto Mode



pshell Command: connect

Description:

The connect command is used to connect the pshell with the command socket. This is typically the first command executed in the session of a pshell. A successful connection responds with the list of available parameters.

Invocation

connect <ipaddress> <port>

Examples

connect localhost 17000 connect 10.0.0.232 17000



pshell Command: datamode

_	•		•	
	rı	nt	\sim	n:
Desc	11	νι	ı	ıı.

This command ends voice mode, and returns the device to data mode,

Invocation

datamode

Examples

datamode



pshell Command: deepsleep

Description:

Place Popoto into Deep Sleep mode to be awakened by a wake up tone on the acoustic interface. Once in deep sleep, any 25Khz acquisiton pattern will wake the popoto modem. This can most easily be generated by sending a ping command from the remote modem. Deepsleep is a low power mode that consumes 150mW. Awakening from Deepsleep takes approximately 1 second after the acquisition.

Invocation

deepsleep

Examples

deepsleep



pshell Command: disablemsmlog

Description:

This api disables logging of modem statemachine transitions.

Invocation

disablemsmlog

Examples

disablemsmlog



pshell Command: disconnect

Description:

Disconnect the pshell from the popoto modem application. This command is sent if the user wishes to connect an application via ethernet.

Invocation

disconnect

Examples

disconnect



pshell Command: download

Description:

downloads a file in streaming mode. The remote unit must issue an upload. if the start remote start power level is set to other than 0, the local modem will send an upload command to the remote modem using the specified power level., and then begin the download process. Otherwise it will sit and wait for the remote modem to start on its own.

Invocation

download <filename> [Remote Start Power Level]

Examples

download MyDownload.txt download MyDownload.txt 10



pshell Command: enablemsmlog

Description:

This api enable logging of modem statemachine transitions. These transition sare logged in the popoto.log file on the modem, and are noted with the ENTER STATE text

Invocation

enablemsmlog

Examples

enablemsmlog



pshell Command: exit

Description:

Exits Popoto Modem pshell. Note: On hardware pshell, quit and exit are disabled

Invocation

exit

Examples

exit



pshell Command: getEXP1

Description:

The EXP1 Pin is a GPIO Input pin available on the Popoto expansion header. This API allows the user to get the value of that pin.

Invocation

getEXP1

Examples

getEXP0



pshell Command: getIP

Description:

Display the currently configured IP address and status of the Popoto modem

Invocation

getIP

Examples

getIP

IPv4 Address: eth0: flags=4163<UP,BROADCAST,RUNNING,MULTICAST> mtu 1500
inet 10.0.0.65 netmask 255.255.255.0 broadcast 10.0.0.255
ether 00:0c:29:36:4f:2f txqueuelen 1000 (Ethernet)
RX packets 3178079 bytes 843820500 (843.8 MB)
RX errors 0 dropped 508 overruns 0 frame 0
TX packets 2392420 bytes 2432926671 (2.4 GB)
TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0



pshell Command: getPEP

Description:

Returns the peak envelope power of the transmitted waveform. PEP is a metric used to quantify the voice transmit power.

Invocation

getPEP

Examples

getPEP



pshell Command: getclock

Description:

Get the Realtime clock in the format YYYY.MM.DD-HH:MM;SS

Invocation

getclock

Examples

getclock
2021.04.02-10:22:30
get the Realtime clock in the format YYYY.MM.DD-HH:MM;SS



pshell Command: getvaluef

Description:

(DEPRECATED) Returns the value of an floating point variable within the Popoto modem. This API is deprecated in favor of the simpler pshell api which allows getting variables without a command. See examples below.

Invocation

getvaluef <Element>

Examples

getvaluef TxPowerWatts
This expression can be replaced with the simpler
TxPowerWatts
Both will return a JSON message like:

{"TxPowerWatts":1.000000}



pshell Command: getvaluei

Description:

(DEPRECATED) Returns the value of an integer variable within the Popoto modem. This API is deprecated in favor of the simpler pshell api which allows getting variables without a command. See examples below.

Invocation

getvaluei <Element>

Examples

getvaluei UPCONVERT_Carrier
This expression can be replaced with the simpler
UPCONVERT_Carrier
Both will return a JSON message like:

{"UPCONVERT_Carrier":25000}



pshell Command: getverbosity

Description:

The getverbosity command is used to read the current verbosity of the popoto api This command returns an integer from 0 to 5. 0 = silent 5 = most verbose

Invocation

getverbosity

Examples

getverbosity



pshell Command: Is

Description:

Is generates a directory listing of the local Popoto storage. it takes 2 arguments. 1) a directory name 2) a regular expression to match for the files to list.

Invocation

connect <ipaddress> <port>

Examples

connect localhost 17000
connect 10.0.0.232 17000
print a directory listing
ls <directory name> <regex>
ls /captures
ls . *.rec



pshell Command: mips

Description:

Query the popoto modem to determine internal cycle counts for algorithms. Cycle counts are returned in a JSON dictionary for parsing by Popoto development tools. This is a typically a command used by the developers.

Invocation

mips

Examples

mips



pshell Command: multiping

Description:

Send an series of acoustic test messages. This api sends the text "Popoto Test Message" repeatedly using the configured data rate, and the approximate specified power level. This api is used to run packet level reliability checks. The power is specified, along with a count, and an interpacket delay.

Invocation

multiping <power Watts> <number of pings> <delay in seconds>

Examples

multiping 10 20 5 Will send 20 ping messages at 10 watts with 5 seconds of delay between messages $\frac{10}{20}$



pshell Command: netplay

Description:

Plays a file file using the network sockets

Invocation

netplay <delresearchfile> <scale> <BB/PB>
where
delresearchfile: is a valid filename
scale: is a floating point gain to be applied to the signal p
prior to transmission
BB/PB: Baseband or passband 1 -> Baseband Recording 0->Passband
Recording
Base band carrier is selected by setting the BBAND_PBAND_UpCarrier
variable.

Examples

netplay TestPBRecording 1.0 0 plays the file TestPBRecording for at a gain of 1.0 in Passband netrec TestBBRecording 20 1 records the file TestBBRecording at a gain of 1.0 in Baseband



pshell Command: netrec

Description:

Records a file file using the network sockets

Invocation

netrec <delresearch File> <time in seconds> <BB/PB> where delresearch file is a valid filename time in seconds is the desired length of the recording BB/PB=1 -> Baseband Recording O->Passband Recording Base band carrier is selected by setting the BBAND_PBAND_DownCarrier variable.

Examples

netrec TestRecording 20 0 records the file TestRecording for 20 seconds in Passband netrec TestRecording 20 1 records the file TestRecording for 20 seconds in Baseband



pshell Command: ping

Description:

Send an acoustic test message. This api sends the text "Popoto Test Message" using the configured data rate, and the approximate specified power level. It is important to note that calling ping with a power level latches that power level in the transmitter, to be used for subsequent transmissions.

Invocation

ping <Power level>

Examples

ping 10 $$\operatorname{Sends}$ a test message (Popoto Test Message) using approximately 10 $$\operatorname{watts}$ of power



pshell Command: playstart

Description:

Starts a playback from the local modem's filesystem. where filename is the name of the file to play where scale factor is a floating point gain to apply to the file

Invocation

playstart <filename> <scale factor>

Examples

playstart /captures/Tone.pcm 1.0



pshell Command: playstop

Description:
Stop and close an in-process playback
Invocation
playstop
Examples
playstop



pshell Command: powerdown

Description:

Place Popoto into POWERDOWN mode to be awakened by a wake up tone on the acoustic interface. Once in powerdown mode, any 25Khz acquisiton pattern will wake the popoto modem. This can most easily be generated by sending a ping command from the remote modem. Things to note: Powerdown mode is the lowest power state of the Popoto Modem, typically 13mW. To awaken from Powerdown mode requires 20 seconds after the acquistion.

Invocation

deepsleep

Examples

deepsleep



pshell Command: q

Description:

Minimize (quiet) the output to the console during normal operation.

Invocation

q

Examples

q



pshell Command: quit

Description:

An alias for exit. Exits Popoto Modem pshell. Note: On hardware pshell, quit and exit are disabled

Invocation

quit

Examples

quit



pshell Command: range

Description:

Sends a two way range request using approximately <Power> watts. This command issues a range request and sends it to the modem at the configured remotelD. The remote modem holds the request for a predetermined amount of time, and then replys with a range response. Popoto will then send back a range report consisting of the distance between the modems, and the configured speed of sound and the computed round trip time. Note that the Speed of sound, and the ranging hold time are configurable parameters, if you do change the ranging hold time, it is imperative that you configure both the local and remote modems to have the same hold time. Otherwise, Popoto will give erroneous range reports.

Invocation

range <power>

Examples

range 20

{"Range":500.002441, "Roundtrip Delay":666.669922, "SpeedOfSound":1500.000000, "Units": "m, ms, meters per second"}



pshell Command: recordstart

Description:

starts a recording to the local storage device.. Filenames are extended with a timestamp. The file(s) will continue to record until the recordstop command is issued

Invocation

recordstart <filename> [duration]
where
filename: is the name of the file to record on the target
processor
duration: Optional parameter that tells how long each individual
record file length
is in seconds.

Examples

recordstart /captures/TestCapeCodBay 60 records a file called TestCapeCodBay<Timestamp>.rec, and rolls the file every 60 seconds, starting a new file with the same base filename with a new appended timestamp



pshell Command: recordstop

Description:
Stop and close an in-process recording
Invocation
recordstop
Evenentes
Examples
recordstop



pshell Command: remote

Description:

Toggles remote mode. In remote mode, any command issued at the pshell is wrapped into an acoustic message and transmitted to the remote modem, where the command is executed, and the status is returned in an acoustic message from the remote modem. Note: It is not permissable to issue a remote transmission using remote mode.

Invocation

remote <on/off>

Examples

remote on
Enables remote mode
remote off
Disables remote mode
NOTE: You cannot issue a transmit command remotely



pshell Command: setEXP0

Description:

The EXPO Pin is a GPIO Output pin available on the Popoto expansion header. This API allows the user to set the value of that pin. Note that the GPIO pin has limited current drive, and if a high current device is to be controlled, it is necessary to use an external FET or relay. Please see Popoto.com for application notes concerning controlling high current devices.

Invocation

setEXP0 <1,0>

Examples

setEXPO 0
Turn off the EXPO pin
setEXPO 1
Turn on the EXPO pin



Description:

Set the modem payload transmission rate to 10240 bits per second

Invocation

do_setRate10240

Examples

do_setRate10240

 ${\tt NOTE:}$ This modulation rate is ${\tt UNCODED},$ and will only work on very clean channels Use with caution.



Description:

Set the modem payload transmission rate to 1280 bits per second

Invocation

setRate1280

Examples

setRate1280
Set the local modem to use the 1280 bit per second modulation
scheme



_	•	. •	
1 1000	TIM:	ナィヘ	n
Descr	11)	11()	11.
	. [~	٠. ٠	

Set the modem payload transmission rate to 2560 bits per second

Invocation

setRate2560

Examples

setRate2560



Description:

Set the modem payload transmission rate to 5120 bits per second

Invocation

setRate5120

Examples

setRate5120



Description:

Set the modem payload transmission rate to 640 bits per second

Invocation

setRate640

Examples

setRate640

Set the local modem to use the 640 bit per second modulation scheme



Descri	ntion.
	Pulon.

Set the modem payload transmission rate to 80 bits per second

Invocation

setRate80

Examples

setRate80



pshell Command: setTerminalMode

Description:

Set the pshell terminal to raw mode or ANSI mode. ANSI Mode allows for highlighting of responses, Raw mode is easier to use if controlling the device programatically

Invocation

setTerminalMode <raw/ansi>

Examples

setTerminalMode raw
setTerminalMode ansi



pshell Command: setcarrier

Description:

A helper function to set the transmit and receive carriers to a value. Note that given the version of the modem, there will be different bounds for carrier frequencies. Check documentation UPCON-VERT_Carrier and DOWNCONVERT_Carrier for details on acceptable ranges.

Invocation

setcarrier <Carrier Frequency>

Examples

setcarrier 25000



pshell Command: setcarrier25

Description:

A helper function to set the transmit and receive carriers to 25Khz

Invocation

setcarrier25

Examples

setcarrier25



pshell Command: setcarrier30

Description:

A helper function to set the transmit and receive carriers to 30Khz

Invocation

setcarrier30

Examples

setcarrier30



pshell Command: setclock

Description:

Set the Realtime clock in the format YYYY.MM.DD-HH:MM;SS

Invocation

setclock <Date Time>

Examples

setclock 2021.04.02-10:22:30



pshell Command: setgainmode

Description:

Sets the way the modem manages the high and low gain channels

Invocation

```
setGainMode <0,1,2>
GainMode 0 = High Gain Only
GainMode 1 = Low Gain Only
GainMode 2 = Automatic Gain Selection
```

Examples

setGainMode 2



pshell Command: setvaluef

Description:

(DEPRECATED) Sets an floating point value on the popoto modem This API is deprecated in favor of the simpler pshell api which allows setting variables without a command. See examples below.

Invocation

setvaluef <Element>

Examples

setvaluef TxPowerWatts 10.0 This expression can be replaced with the simpler TxPowerWatts 10.0



pshell Command: setvaluei

Description:

(DEPRECATED) Sets an integer value on the popoto modem This API is deprecated in favor of the simpler pshell api which allows setting variables without a command. See examples below.

Invocation

setvaluei <Element>

Examples

setvaluei UPCONVERT_Carrier 30000
This expression can be replaced with the simpler UPCONVERT Carrier 30000



pshell Command: setverbosity

Description:

The setverbosity command is used to control the verbosity of the popoto api This command takes an integer from 0 to 5. 0 = silent 5 = most verbose

Invocation

setverbosity <value>

Examples

setverbosity 0

setverbosity 2



pshell Command: sleep

Description:

This command pauses the pshell for N Seconds. It is useful when writing scripts or commands that need to perform tasks at a prescribed interfveal

Invocation

sleep \N Sleep for N seconds, where N is an integer.

Examples

sleep 5



pshell Command: ssb

	. •
Descri	ntion:
	puon.

Place the ssb Voice into Receive mode

Invocation

ssb

Examples

ssb



pshell Command: ssbtx

Descri	ntion.
	Pulon.

Force the SSB Voice mode into Transmit mode

Invocation

ssbtx

Examples

ssbtx



pshell Command: startrx

Description:

This command enables the modem receiver, and returns the modem statemachine to the listening state pshell invokes this command automatically at boot up.

Invocation

startrx

Examples

startrx



pshell Command: transmit

Description:

Transmit a string to the remote modem. Strings do not need to be delimited, and can have spaces in them. This is used for sending data to the remote modem

Invocation

transmit <message>

Where message is a text string

Examples

transmit Hello
transmit Hello World it's me, Popoto



pshell Command: transmitJSON

Description:

Transmit a JSON encoded message to the remote modem. This is used for sending data to the remote modem

Invocation

```
transmitJSON <message>
The structure of the message is
{"Payload":{"Data":[<COMMA SEPARATED 8 BIT VALUES>]}}
```

Examples

```
transmitJSON {"Payload":{"Data":[1,2,3,4,5]}}
sends the binary sequence 0x01 0x02 0x03 0x04 0x05
transmitJSON {"Payload":{"Data": "Hello World"}}
sends the text sequence Hello World
```



pshell Command: transmitJSONFiles

Description:

Transmit a file of JSON encoded messages to the remote modem.

Invocation

transmitJSONFiles <filename> <power> <delay between transmissions>
<num transmissions per packet>

Examples

transmitJSONFiles JanusTestCase1.txt 10 30 10



pshell Command: unq

	•		•	
1 1000	rı	nt	\cap	n:
Desc	11	ρι	ı	т.

Unquiet the output to the console during normal operation.

Invocation

unq

Examples

unq



pshell Command: upload

Description:

Uploads a file in streaming mode.

Invocation

upload [filename] [power level]

Examples

upload myfile 10



pshell Command: version

Description:

Return the serial number and software version of the Popoto modem. Each item is returned in an informational JSON message as shown below

Invocation

version

Examples

version

22 Popoto Variables

The Popoto modem system has a database of configurable parameters which allow customization of the operation of the Popoto modem. These parameters, referred to as Settable/Gettable Variables provide system information such as battery voltage, control modulation parameters such as transmission power and carrier frequency, and provide runtime status such as constellation points, and PLL errors. Settable/Gettable Variables have permissions and bounds checking associated with them. It is important to note that some variables, such as BatteryVoltage, are read-only, and some variables such as UPCONVERT_Carrier, are read and writeable.

Setting variables is accomplished within the JSON API using the Set command. In the example below, we set the Baseband Recording downconvert carrier to 45Khz. The format of the message is:

{"Command": "Set", "Arguments": "SPACE DELIMITED ARGUMENT LIST"}

Table 22.1: Argument List format

Variable	Data Type	Value	Channel
BBAND_DownCarrier	int	Value	0

{"Command": "Set", "Arguments": "BBAND_DownCarrier int 45000.0 0 }

Table 22.2: Variable Set Return Conditions

API	Condition	Example Return
{"Command": "SetValue", "Arguments": "BBAND_DownCarrier 25000 0"}	Success	{"Info":"Value Set BBAND_DownCarrier=25000"}
{"Command": "SetValue", "Arguments": "BBAND_DownCarrier 5000 0"}	Below Min	{"Info":"Value Out of Range: BBAND_DownCarrier=5000 Below Minimum"}
{"Command": "SetValue", "Arguments": "BBAND_DownCarrier 500000 0"}	Above Max	{"Info":"Value Out of Range: BBAND_DownCarrier=500000 Above Maximum"}
{"Command": "SetValue", "Arguments": "bband_downcarrier 25000 0"}	Misspelled	{"Error":"Unknown Element bband_downcarrier"}

What follows is a reference for all of the controllable variables within the Popoto Modem system



APP_CycleCount

```
Description:
    Display Cycle Counter

Data Type
    int

Minimum Value
    0.0

Maximum Value
    0.0

Permissions
    Read Only

JSON API Syntax:
{"Command": "GetValue", "Arguments": "APP_CycleCount int 0 }
{"Command": "SetValue", "Arguments": "APP_CycleCount int 0.0 0 }

Return:
{"APP_CycleCount": value}
```



APP_CycleCountReset

```
Description:
    Display Cycle Counter and Reset

Data Type
    int

Minimum Value
    0.0

Maximum Value
    0.0

Permissions
    Read Only

JSON API Syntax:
{"Command":"GetValue","Arguments":"APP_CycleCountReset int 0 }
{"Command":"SetValue","Arguments":"APP_CycleCountReset int 0.0 0 }

Return:
{"APP_CycleCountReset": value}
```



APP_ModemSMAOut

```
Description:
    Flag to Send Modem Data to the SMA Port out
Data Type
    int

Minimum Value
    0.0

Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command":"GetValue","Arguments":"APP_ModemSMAOut int 0 }
{"Command":"SetValue","Arguments":"APP_ModemSMAOut int 1.0 0 }

Return:
{"APP_ModemSMAOut": value}
```



APP_SocketBasedPCM

```
Description:
    Flag to enable Socket based PCM
Data Type
    int

Minimum Value
    0.0
Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command":"GetValue","Arguments":"APP_SocketBasedPCM int 0 }
{"Command":"SetValue","Arguments":"APP_SocketBasedPCM int 1.0 0 }

Return:
{"APP_SocketBasedPCM": value}
```



BBAND_DownCarrier

```
Description:
  Downconvert Baseband Streaming carrier 5120 to 45000
Data Type
  int
Minimum Value
  5120.0
Maximum Value
  45000.0
Permissions
  Read and Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "BBAND_DownCarrier int 0 }
{"Command": "SetValue", "Arguments": "BBAND_DownCarrier int 45000.0 0
}
Return:
{"BBAND_DownCarrier": value}
```



BBAND_OutputScale

```
Description:
    Upconvert Output scaling for Baseband Passband module
Data Type
    float

Minimum Value
    0.0

Maximum Value
    10.0

Permissions
    Read and Write

JSON API Syntax:
{"Command":"GetValue", "Arguments": "BBAND_OutputScale float 0 }
{"Command": "SetValue", "Arguments": "BBAND_OutputScale float 10.0 0 }

Return:
{"BBAND_OutputScale": value}
```



BBAND_UpCarrier

```
Description:
   Upconvert Baseband Streaming carrier 5120 to 45000
Data Type
   int

Minimum Value
   5120.0
Maximum Value
   45000.0

Permissions
   Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "BBAND_UpCarrier int 0 }
{"Command": "SetValue", "Arguments": "BBAND_UpCarrier int 45000.0 0 }

Return:
{"BBAND_UpCarrier": value}
```



BatteryCharge

```
Description:
  Battery Charge in mAh
Data Type
  float
Minimum Value
  0.0
Maximum Value
  271.98999
Permissions
   Read and Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "BatteryCharge float 0 }
{"Command": "SetValue", "Arguments": "BatteryCharge float 271.98999 0
}
Return:
{"BatteryCharge": value}
```



BatteryCurrent

```
Description:
  Battery Current in positive (to battery; unused) / negative (from
battery) in mA
Data Type
  float
Minimum Value
  0.0
Maximum Value
  200.0
Permissions
  Read Only
JSON API Syntax:
{"Command": "GetValue", "Arguments": "BatteryCurrent float 0 }
{"Command": "SetValue", "Arguments": "BatteryCurrent float 200.0 0 }
Return:
{"BatteryCurrent": value}
```



BatteryVoltage

```
Description:
    System Battery Voltage in volts

Data Type
    float

Minimum Value
        0.0

Maximum Value
        40.0

Permissions
        Read Only

JSON API Syntax:
{"Command":"GetValue", "Arguments": "BatteryVoltage float 0 }
{"Command":"SetValue", "Arguments": "BatteryVoltage float 40.0 0 }

Return:
{"BatteryVoltage": value}
```



Carrier

Description: Sets both the Transmit and Receiver Carriers. Reading this variable returns the Transmitter Carrier. Data Type int Minimum Value 20000.0 Maximum Value 59750.0 Permissions Read and Write JSON API Syntax: {"Command": "GetValue", "Arguments": "Carrier int 0 } {"Command": "SetValue", "Arguments": "Carrier int 59750.0 0 } Return: {"Carrier": value}



CarrierTxMode

```
Description:
  set the transmitter to send FH waveform (0-default) or 1-simply a
carrier note
Data Type
  int
Minimum Value
  0.0
Maximum Value
  1.0
Permissions
  Read and Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "CarrierTxMode int 0 }
{"Command": "SetValue", "Arguments": "CarrierTxMode int 1.0 0 }
Return:
{"CarrierTxMode": value}
```



ChannelIR

```
Description:
  Measured channel impulse response: Getter returns number of
expected values
Data Type
  int
Minimum Value
  0.0
Maximum Value
  0.0
Permissions
  Read Only
JSON API Syntax:
{"Command": "GetValue", "Arguments": "ChannelIR int 0 }
{"Command": "SetValue", "Arguments": "ChannelIR int 0.0 0 }
Return:
{"ChannelIR": value}
```



ConsolePacketBytes

```
Description:
Number of console characters input to trigger an autosend
Data Type
int

Minimum Value
0.0

Maximum Value
8192.0

Permissions
Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "ConsolePacketBytes int 0 }
{"Command": "SetValue", "Arguments": "ConsolePacketBytes int 8192.0 0 }

Return:
{"ConsolePacketBytes": value}
```



ConsoleTimeoutMS

```
Description:
    Number of console milliseconds expired to trigger an autosend
Data Type
    int

Minimum Value
    0.0
Maximum Value
    60000.0

Permissions
    Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "ConsoleTimeoutMS int 0 }
{"Command": "SetValue", "Arguments": "ConsoleTimeoutMS int 60000.0 0 }

Return:
{"ConsoleTimeoutMS": value}
```



DOWNCONVERT_Carrier

```
Description:
  Downconverter Carrier Frequency in Hz
Data Type
  int
Minimum Value
  20000.0
Maximum Value
  59750.0
Permissions
   Read and Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "DOWNCONVERT_Carrier int 0 }
{"Command": "SetValue", "Arguments": "DOWNCONVERT_Carrier int 59750.0
0 }
Return:
{"DOWNCONVERT_Carrier": value}
```



DataPortMode

```
Description:
    O-Data Port acts as Telnet; 1 Data Port is raw TCP data
Data Type
    int

Minimum Value
    O.0

Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "DataPortMode int 0 }
{"Command": "SetValue", "Arguments": "DataPortMode int 1.0 0 }

Return:
{"DataPortMode": value}
```



DepartureDelay_samples

```
Description:
   Tx departure delay
Data Type
   int

Minimum Value
   0.0
Maximum Value
   3072000.0

Permissions
   Read and Write

JSON API Syntax:
{"Command":"GetValue", "Arguments": "DepartureDelay_samples int 0 }
{"Command":"SetValue", "Arguments": "DepartureDelay_samples int 3072000.0 0 }

Return:
{"DepartureDelay samples": value}
```



DopplerDisable

```
Description:
  Switch to control the doppler compensation 1= Doppler Compen-
sation on 0 = Doppler Compensation off
Data Type
  int
Minimum Value
  0.0
Maximum Value
  1.0
Permissions
  Read and Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "DopplerDisable int 0 }
{"Command": "SetValue", "Arguments": "DopplerDisable int 1.0 0 }
Return:
{"DopplerDisable": value}
```



DopplerEnable

```
Description:
    enable (1) or disable(0) doppler estimation

Data Type
    int

Minimum Value
    0.0

Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "DopplerEnable int 0 }
{"Command": "SetValue", "Arguments": "DopplerEnable int 1.0 0 }

Return:
{"DopplerEnable": value}
```



FHDEMOD_DetectThresholdDB

```
Description:
  Detection threshold for signal aquire default 160 for -5db AWGN
detect
Data Type
  float
Minimum Value
  0.0
Maximum Value
  300.0
Permissions
  Read and Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "FHDEMOD_DetectThresholdDB float
300.0 0 }
Return:
{"FHDEMOD DetectThresholdDB": value}
```



FHDEMOD_HopSeqLen

```
Description:
Set the hop sequence length demodulator
Data Type
int

Minimum Value
1.0

Maximum Value
8192.0

Permissions
Read and Write

JSON API Syntax:
{"Command":"GetValue", "Arguments":"FHDEMOD_HopSeqLen int 0 }
{"Command":"SetValue", "Arguments":"FHDEMOD_HopSeqLen int 8192.0 0 }

Return:
{"FHDEMOD_HopSeqLen": value}
```



FHMOD_HopSeqLen

```
Description:
Set the hop sequence length demodulator

Data Type
int

Minimum Value
1.0

Maximum Value
8192.0

Permissions
Read and Write

JSON API Syntax:
{"Command":"GetValue","Arguments":"FHMOD_HopSeqLen int 0 }
{"Command":"SetValue","Arguments":"FHMOD_HopSeqLen int 8192.0 0 }

Return:
{"FHMOD_HopSeqLen": value}
```



FHMOD_NumChipReps

```
Description:
Set the hop frequency redundancy for payloads
Data Type
int

Minimum Value
1.0

Maximum Value
4.0

Permissions
Read and Write

JSON API Syntax:
{"Command":"GetValue","Arguments":"FHMOD_NumChipReps int 0 }
{"Command":"SetValue","Arguments":"FHMOD_NumChipReps int 4.0 0 }

Return:
{"FHMOD_NumChipReps": value}
```



GainAdjustMode

```
Description:
Set the gain mode O-lowgain, 1-highgain, 2-automatic
Data Type
int

Minimum Value
0.0

Maximum Value
2.0

Permissions
Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "GainAdjustMode int 0 }
{"Command": "SetValue", "Arguments": "GainAdjustMode int 2.0 0 }

Return:
{"GainAdjustMode": value}
```



HP_FilterEnable

```
Description:

HP Filter enable / disable flag O=disable I = enable

Data Type
int

Minimum Value
0.0

Maximum Value
1.0

Permissions
Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "HP_FilterEnable int 0 }
{"Command": "SetValue", "Arguments": "HP_FilterEnable int 1.0 0 }

Return:
{"HP_FilterEnable": value}
```



Headerless

```
Description:
    Enable headerless streaming mode (0-default)
Data Type
    int

Minimum Value
    0.0
Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "Headerless int 0 }
{"Command": "SetValue", "Arguments": "Headerless int 1.0 0 }

Return:
{"Headerless": value}
```



InBandNoiseEnergy

```
Description:
Noise Energy Measured after downsampling filter

Data Type
float

Minimum Value
0.0

Maximum Value
1.0

Permissions
Read Only

JSON API Syntax:
{"Command":"GetValue","Arguments":"InBandNoiseEnergy float 0 }
{"Command":"SetValue","Arguments":"InBandNoiseEnergy float 1.0 0 }

Return:
{"InBandNoiseEnergy": value}
```



InbandEnergy

```
Description:
    Inband energy parameter

Data Type
    float

Minimum Value
    0.0

Maximum Value
    0.0

Permissions
    Read Only

JSON API Syntax:
{"Command":"GetValue","Arguments":"InbandEnergy float 0 }
{"Command":"SetValue","Arguments":"InbandEnergy float 0.0 0 }

Return:
{"InbandEnergy": value}
```



LedEnable

```
Description:
    O-disable all board LEDS; 1 enable board LEDS

Data Type
    int

Minimum Value
    O.0

Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "LedEnable int 0 }
{"Command": "SetValue", "Arguments": "LedEnable int 1.0 0 }

Return:
{"LedEnable": value}
```



LocalID

```
Description:
Local Modem ID 0-254;255 broadcast

Data Type
int

Minimum Value
0.0

Maximum Value
255.0

Permissions
Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "LocalID int 0 }
{"Command": "SetValue", "Arguments": "LocalID int 255.0 0 }

Return:
{"LocalID": value}
```



LoggingLevel

```
Description:
Logging verbosity level
Data Type
int

Minimum Value
0.0
Maximum Value
5.0

Permissions
Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "LoggingLevel int 0 }
{"Command": "SetValue", "Arguments": "LoggingLevel int 5.0 0 }

Return:
{"LoggingLevel": value}
```



MODEM_Enable

```
Description:
    enable (1) or disable (0) modem processing
Data Type
    int

Minimum Value
    0.0

Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "MODEM_Enable int 0 }
{"Command": "SetValue", "Arguments": "MODEM_Enable int 1.0 0 }

Return:
{"MODEM_Enable": value}
```



PSK_BnTaps

Description:

The number of Backward taps for the PSK Equalizer. The number of forward taps + the number of backwards taps must be less than MAX value

Data Type
int

Minimum Value 0.0 Maximum Value 100.0

Permissions Read and Write

JSON API Syntax:

```
{"Command":"GetValue","Arguments":"PSK_BnTaps int 0 }
{"Command":"SetValue","Arguments":"PSK_BnTaps int 100.0 0 }
```

Return:

{"PSK_BnTaps": value}



PSK_Constellation

```
Description:
Returns the last 64 Constellation points from the PSK Modem

Data Type
float

Minimum Value
0.0

Maximum Value
0.0

Permissions
Read Only

JSON API Syntax:
{"Command": "GetValue", "Arguments": "PSK_Constellation float 0 }
{"Command": "SetValue", "Arguments": "PSK_Constellation float 0.0 0 }

Return:
{"PSK_Constellation": value}
```



PSK_FnTaps

Description:

The number of Forward taps for the PSK Fractional (N/2) Equalizer. The number of forward taps + the number of backwards taps must be less than MAX value.

Data Type int

Minimum Value 0.0 Maximum Value 100.0

Permissions Read and Write

JSON API Syntax:

```
{"Command":"GetValue","Arguments":"PSK_FnTaps int 0 }
{"Command":"SetValue","Arguments":"PSK_FnTaps int 100.0 0 }
```

Return:

```
{"PSK_FnTaps": value}
```



PSK_PDSNR

```
Description:
    Post detection SNR for the PSK
Data Type
    int

Minimum Value
    0.0

Maximum Value
    1.0

Permissions
    Read Only

JSON API Syntax:
{"Command": "GetValue", "Arguments": "PSK_PDSNR int 0 }
{"Command": "SetValue", "Arguments": "PSK_PDSNR int 1.0 0 }

Return:
{"PSK_PDSNR": value}
```



PSK_PLL

```
Description:
Returns the PLL Error

Data Type
float

Minimum Value
0.0

Maximum Value
0.0

Permissions
Read Only

JSON API Syntax:
{"Command": "GetValue", "Arguments": "PSK_PLL float 0 }
{"Command": "SetValue", "Arguments": "PSK_PLL float 0.0 0 }

Return:
{"PSK_PLL": value}
```



PSK_Taps

```
Description:
  Returns the Current Equalizer taps as an array with forward taps
concatenated with backwards taps
Data Type
  float
Minimum Value
  0.0
Maximum Value
  0.0
Permissions
  Read Only
JSON API Syntax:
{"Command": "GetValue", "Arguments": "PSK_Taps float 0 }
{"Command": "SetValue", "Arguments": "PSK_Taps float 0.0 0 }
Return:
{"PSK Taps": value}
```



PayloadMode

```
Description:
  BitRate of Payload transmission 0-FH, 1-QPSK5120bps, 2-
QPSK2560bps, 3-QPSK1920bps,4-QPSK1280bps, 5-BPSK2560bps,
6-BPSK1280bps, 7-BPSK960bps, 8-BPSK640bps
Data Type
  int
Minimum Value
Maximum Value
  8.0
Permissions
  Read and Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "PayloadMode int 0 }
{"Command": "SetValue", "Arguments": "PayloadMode int 8.0 0 }
Return:
{"PayloadMode": value}
```



PeakEnvelopePower

```
Description:
Peak envelope power of previous transmission

Data Type
float

Minimum Value
0.0

Maximum Value
0.0

Permissions
Read Only

JSON API Syntax:
{"Command": "GetValue", "Arguments": "PeakEnvelopePower float 0 }
{"Command": "SetValue", "Arguments": "PeakEnvelopePower float 0.0 0 }

Return:
{"PeakEnvelopePower": value}
```



PlayMode

```
Description:
    O-Play in Passband; 1 Play in baseband
Data Type
    int

Minimum Value
    O.0

Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "PlayMode int 0 }
{"Command": "SetValue", "Arguments": "PlayMode int 1.0 0 }

Return:
{"PlayMode": value}
```



RNG_SpeedOfSound

```
Description:
  Speed of sound in meters per second. Adjust this value for different
water salinity etc.
Data Type
  float
Minimum Value
  340.0
Maximum Value
  1600.0
Permissions
  Read and Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "RNG_SpeedOfSound float 0 }
{"Command": "SetValue", "Arguments": "RNG_SpeedOfSound float 1600.0 0
Return:
{"RNG_SpeedOfSound": value}
```



RNG_TA_DelayMs

Description:

Sets the hold time for ranging in milliseconds. This is the amount of time a modem waits before responding to a range request.

Data Type

int

Minimum Value 2500.0 Maximum Value 8000.0

Permissions Read and Write

JSON API Syntax:

```
{"Command":"GetValue", "Arguments": "RNG_TA_DelayMs int 0 }
{"Command": "SetValue", "Arguments": "RNG TA DelayMs int 8000.0 0 }
```

Return:

```
{"RNG TA DelayMs": value}
```



RangeTimeout_mS

```
Description:
Range reply timeout in ms
Data Type
int

Minimum Value
0.0

Maximum Value
60000.0

Permissions
Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "RangeTimeout_mS int 0 }
{"Command": "SetValue", "Arguments": "RangeTimeout_mS int 60000.0 0 }

Return:
{"RangeTimeout_mS": value}
```



RecordMode

```
Description:
  0-Record in Passband; 1 Record in baseband 2 Record Dual Chan-
nel
Data Type
  int
Minimum Value
  0.0
Maximum Value
  2.0
Permissions
   Read and Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "RecordMode int 0 }
{"Command": "SetValue", "Arguments": "RecordMode int 2.0 0 }
Return:
{"RecordMode": value}
```



RemotelD

```
Description:
Local Modem ID 0-254;255 broadcast

Data Type
int

Minimum Value
0.0

Maximum Value
255.0

Permissions
Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "RemoteID int 0 }
{"Command": "SetValue", "Arguments": "RemoteID int 255.0 0 }

Return:
{"RemoteID": value}
```



ReportErroredBytes

```
Description:
Switch to control whether to report the bytes in a bad CRC packet
Data Type
int

Minimum Value
0.0

Maximum Value
1.0

Permissions
Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "ReportErroredBytes int 0 }
{"Command": "SetValue", "Arguments": "ReportErroredBytes int 1.0 0 }

Return:
{"ReportErroredBytes": value}
```



RxEnable

```
Description:
    enable (1) or disable (0) receiver processing

Data Type
    int

Minimum Value
    0.0

Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "RxEnable int 0 }
{"Command": "SetValue", "Arguments": "RxEnable int 1.0 0 }

Return:
{"RxEnable": value}
```



RxScramblerMode

```
Description:
    Scrambler Enable on Rx O-disable 1-enable

Data Type
    int

Minimum Value
    0.0

Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "RxScramblerMode int 0 }
{"Command": "SetValue", "Arguments": "RxScramblerMode int 1.0 0 }

Return:
{"RxScramblerMode": value}
```



SNR

```
Description:
    SNR Estimate
Data Type
    float

Minimum Value
    0.0

Maximum Value
    0.0

Permissions
    Read Only

JSON API Syntax:
{"Command": "GetValue", "Arguments": "SNR float 0 }
{"Command": "SetValue", "Arguments": "SNR float 0.0 0 }

Return:
{"SNR": value}
```



SSB_Enable

```
Description:
    SSB Enable, default 0
Data Type
    int

Minimum Value
    0.0
Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command":"GetValue","Arguments":"SSB_Enable int 0 }
{"Command":"SetValue","Arguments":"SSB_Enable int 1.0 0 }

Return:
{"SSB_Enable": value}
```



SSB_NREnable

```
Description:
    SSB Enable advanced squelch, AGC and Noise Reduction
Data Type
    int

Minimum Value
    0.0

Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "SSB_NREnable int 0 }
{"Command": "SetValue", "Arguments": "SSB_NREnable int 1.0 0 }

Return:
{"SSB_NREnable": value}
```



SSB_SetPTT

```
Description:
    SSB set state of ptt from console

Data Type
    int

Minimum Value
    0.0

Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command":"GetValue","Arguments":"SSB_SetPTT int 0 }
{"Command":"SetValue","Arguments":"SSB_SetPTT int 1.0 0 }

Return:
{"SSB_SetPTT": value}
```



SSB_SqLevel

```
Description:
    SSB Sqelching threshold 0-always on, default=.005
Data Type
    float

Minimum Value
    0.0
Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "SSB_SqLevel float 0 }
{"Command": "SetValue", "Arguments": "SSB_SqLevel float 1.0 0 }

Return:
{"SSB_SqLevel": value}
```



SSB_Txpower

```
Description:
    SSB Output power scale, default=1

Data Type
    float

Minimum Value
    0.0

Maximum Value
    100.0

Permissions
    Read and Write

JSON API Syntax:
{"Command":"GetValue", "Arguments": "SSB_Txpower float 0 }
{"Command":"SetValue", "Arguments": "SSB_Txpower float 100.0 0 }

Return:
{"SSB_Txpower": value}
```



SSB_UseGPIO

```
Description:
Process J7 P3 GPIO 8/6 and P9 GPIO 7/14 Switches, default=0
Data Type
int

Minimum Value
0.0

Maximum Value
1.0

Permissions
Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "SSB_UseGPIO int 0 }
{"Command": "SetValue", "Arguments": "SSB_UseGPIO int 1.0 0 }

Return:
{"SSB_UseGPIO": value}
```



SSB_Volume

```
Description:
    SSB Speaker Volume, default=1

Data Type
    float

Minimum Value
    0.0

Maximum Value
    100.0

Permissions
    Read and Write

JSON API Syntax:
{"Command":"GetValue","Arguments":"SSB_Volume float 0 }
{"Command":"SetValue","Arguments":"SSB_Volume float 100.0 0 }

Return:
{"SSB_Volume": value}
```



SSB_VxHang

```
Description:
    SSB Vox hangover switch time seconds, default=2.0

Data Type
    float

Minimum Value
    0.0

Maximum Value
    10.0

Permissions
    Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "SSB_VxHang float 0 }
{"Command": "SetValue", "Arguments": "SSB_VxHang float 10.0 0 }

Return:
{"SSB_VxHang": value}
```



SSB_VxLevel

```
Description:
    SSB Vox switching threshold 0-always on, default=.005
Data Type
    float

Minimum Value
    0.0
Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "SSB_VxLevel float 0 }
{"Command": "SetValue", "Arguments": "SSB_VxLevel float 1.0 0 }

Return:
{"SSB_VxLevel": value}
```



SSB_VxMode

```
Description:
    SSB 1-Enable voice activated PTT (vox), 0-disable
Data Type
    int

Minimum Value
    0.0
Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "SSB_VxMode int 0 }
{"Command": "SetValue", "Arguments": "SSB_VxMode int 1.0 0 }

Return:
{"SSB_VxMode": value}
```



SSB_carrier

```
Description:
    SSB set Tx Rx carrier

Data Type
    int

Minimum Value
    22000.0

Maximum Value
    35000.0

Permissions
    Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "SSB_carrier int 0 }
{"Command": "SetValue", "Arguments": "SSB_carrier int 35000.0 0 }

Return:
{"SSB_carrier": value}
```



SSB_sideband

```
Description:
    SSB sidband O-L 1-U
Data Type
    int

Minimum Value
    0.0
Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "SSB_sideband int 0 }
{"Command": "SetValue", "Arguments": "SSB_sideband int 1.0 0 }

Return:
{"SSB_sideband": value}
```



SignalEnergy

```
Description:
Signal Energy Measured during last FH acquisition

Data Type
float

Minimum Value
0.0

Maximum Value
1.0

Permissions
Read Only

JSON API Syntax:
{"Command":"GetValue","Arguments":"SignalEnergy float 0 }
{"Command":"SetValue","Arguments":"SignalEnergy float 1.0 0 }

Return:
{"SignalEnergy": value}
```



StreamingTxLen

```
Description:
Size of superpacket when streaming or uploading.

Data Type
int

Minimum Value
0.0

Maximum Value
8192.0

Permissions
Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "StreamingTxLen int 0 }
{"Command": "SetValue", "Arguments": "StreamingTxLen int 8192.0 0 }

Return:
{"StreamingTxLen": value}
```



SystemMode

```
Description:
  System Mode 0-DataModem, 1-SSB, 2-DataModem+SSB, 3-SMA IN
to Tx
Data Type
  int
Minimum Value
  0.0
Maximum Value
  4.0
Permissions
   Read and Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "SystemMode int 0 }
{"Command": "SetValue", "Arguments": "SystemMode int 4.0 0 }
Return:
{"SystemMode": value}
```



TCPecho

```
Description:
  O-disable TCP echo in telnet Tx stream; I enable TCP echo in telnet
Tx stream
Data Type
  int
Minimum Value
  0.0
Maximum Value
  1.0
Permissions
   Read and Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "TCPecho int 0 }
{"Command": "SetValue", "Arguments": "TCPecho int 1.0 0 }
Return:
{"TCPecho": value}
```



Temp_Ambient

```
Description:
   Ambient bottle temperature in degrees C
Data Type
   float

Minimum Value
    0.0

Maximum Value
    0.0

Permissions
   Read Only

JSON API Syntax:
{"Command": "GetValue", "Arguments": "Temp_Ambient float 0 }
{"Command": "SetValue", "Arguments": "Temp_Ambient float 0.0 0 }

Return:
{"Temp_Ambient": value}
```



TxChirpMode

```
Description:
    Transmit chirps prior to packets 0-disable 1-enable
Data Type
    int

Minimum Value
    0.0
Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "TxChirpMode int 0 }
{"Command": "SetValue", "Arguments": "TxChirpMode int 1.0 0 }

Return:
{"TxChirpMode": value}
```



TxEnable

```
Description:
    enable (1) or disable (0) transmit processing

Data Type
    int

Minimum Value
    0.0

Maximum Value
    1.0

Permissions
    Read and Write

JSON API Syntax:
{"Command":"GetValue","Arguments":"TxEnable int 0 }
{"Command":"SetValue","Arguments":"TxEnable int 1.0 0 }

Return:
{"TxEnable": value}
```



TxPower

```
Description:
   Tx power in watts

Data Type
   int

Minimum Value
   0.0

Maximum Value
   100.0

Permissions
   Read and Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "TxPower int 0 }
{"Command": "SetValue", "Arguments": "TxPower int 100.0 0 }

Return:
{"TxPower": value}
```



TxPowerWatts

```
Description:
   TX output power in watts

Data Type
   float

Minimum Value
    0.0

Maximum Value
    1000.0

Permissions
   Read and Write

JSON API Syntax:
{"Command":"GetValue","Arguments":"TxPowerWatts float 0 }
{"Command":"SetValue","Arguments":"TxPowerWatts float 1000.0 0 }

Return:
{"TxPowerWatts": value}
```



TxTimeout_mS

```
Description:
    Transmit timeout in ms
Data Type
    int

Minimum Value
    0.0

Maximum Value
    60000.0

Permissions
    Read and Write

JSON API Syntax:
{"Command":"GetValue","Arguments":"TxTimeout_mS int 0 }
{"Command":"SetValue","Arguments":"TxTimeout_mS int 60000.0 0 }

Return:
{"TxTimeout_mS": value}
```



UPCONVERT_Carrier

```
Description:
  Upconverter Carrier Frequency in Hz
Data Type
  int
Minimum Value
  20000.0
Maximum Value
  59750.0
Permissions
   Read and Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "UPCONVERT_Carrier int 0 }
{"Command": "SetValue", "Arguments": "UPCONVERT_Carrier int 59750.0 0
}
Return:
{"UPCONVERT_Carrier": value}
```



UPCONVERT_OutputScale

```
Description:
  Upconverter Output Scale
Data Type
  float
Minimum Value
  0.0
Maximum Value
  10.0
Permissions
  Read and Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "UPCONVERT_OutputScale float 0 }
{"Command": "SetValue", "Arguments": "UPCONVERT_OutputScale float 10.0
0 }
Return:
{"UPCONVERT OutputScale": value}
```



UnitTestMode

```
Description:
  O or 1: If 1 Pump data in a deterministic way from a socket. This
disables timeouts on recordings and Play
Data Type
  int
Minimum Value
  0.0
Maximum Value
  1.0
Permissions
  Read and Write
JSON API Syntax:
{"Command":"GetValue", "Arguments": "UnitTestMode int 0 }
{"Command": "SetValue", "Arguments": "UnitTestMode int 1.0 0 }
Return:
{"UnitTestMode": value}
```



brdState

```
Description:
Board State State
Data Type
int

Minimum Value
0.0

Maximum Value
0.0

Permissions
Read Only

JSON API Syntax:
{"Command": "GetValue", "Arguments": "brdState int 0 }
{"Command": "SetValue", "Arguments": "brdState int 0.0 0 }

Return:
{"brdState": value}
```



rxState

```
Description:
    Present Receiver State

Data Type
    int

Minimum Value
    0.0

Maximum Value
    0.0

Permissions
    Read Only

JSON API Syntax:
{"Command":"GetValue","Arguments":"rxState int 0 }
{"Command":"SetValue","Arguments":"rxState int 0.0 0 }

Return:
{"rxState": value}
```



tpaState

```
Description:
    Power Amplifier State
Data Type
    int

Minimum Value
    0.0

Maximum Value
    0.0

Permissions
    Read Only

JSON API Syntax:
{"Command": "GetValue", "Arguments": "tpaState int 0 }
{"Command": "SetValue", "Arguments": "tpaState int 0.0 0 }

Return:
{"tpaState": value}
```

23 TIPE

23.1 TIPE Commands

pshell Command: range

Description:

Sends a two-way range request using approximately <Power> watts. This command issues a range request and sends it to the specified module (modem, echosounder, transponder) at the configured remoteID. The remote module holds the request for a predetermined amount of time, and then replies with a range response. Popoto will then send back a range report consisting of the distance between the devices, the configured speed of sound, and the computed round trip time.

Modem: The first modem requests a range response, and the second modem sends a range reply after it receives the request. The round trip time is computed, and then scaled with the configured speed of sound to come up with a time of flight range.

Transponder: This algorithm works similarly to the modem; however, rather than exchanging digital messages, the signaling is done via tones.

Echosounder: The echosounder sends a chirp (as configured in the TIPE configuration settings) and listens for its echo reflection to determine the distance to the surface or bottom.

Note that the speed of sound, and the ranging hold time are configurable parameters. If you change the ranging hold time, it is imperative that you configure both the local and remote modules to have the same hold time. Otherwise, Popoto will give erroneous range reports.

Invocation



range <power> [module]

Examples

```
range 20
range 20 transponder
range 20 echosounder
{"Range":500.002441,"Roundtrip Delay":666.669922,"SpeedOfSound":1500.000000,"Units":"m,
ms, meters per second"}
Or if there is a timeout
{"Alert":"Timeout"}
```



pshell Command: ping

Description:

Send an acoustic test message. This API sends the text "Popoto Test Message" using the configured data rate and the approximate specified power level when the module is set to 'modem'. For the 'pinger' module, it sends a tonal ping as configured with the 'pinger:<configuration variables>'. It is important to note that calling ping with a power level latches that power level in the transmitter, to be used for subsequent transmissions.

Modem (default): Sends the text "Popoto Test Message."

Pinger: Sends a tonal ping as configured with the 'pinger:<configuration variables>'.

Invocation

ping <power level> [module]

Examples

```
ping 10
ping 10 pinger
Sends a test message (Popoto Test Message) using approximately 10
watts of power
```



23.2 TIPE Variables

echosounder:mode

```
Description:
    Echo Sounder Modes of operation. Default value: 0 = Off).

Data Type
    int

Minimum Value
    O

Maximum Value
    1

Permissions
    Read Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "echosounder: mode int 0 }
{"Command": "SetValue", "Arguments": "echosounder: mode int 1 0 }

Return:
{"echosounder: mode": value}
```



echosounder:carrier

```
Description:
  Center frequency of echo sounder. Default value: 10000.
Data Type
  int
Minimum Value
  5000
Maximum Value
   45000
Permissions
   Read Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "echosounder: carrier int 0 }
{"Command": "SetValue", "Arguments": "echosounder: carrier int 45000 0
}
Return:
{"echosounder:carrier": value}
```



echosounder:hfmchirpbw

```
Description:
  HFM chirp bandwidth. Default value: 5 khz.
Data Type
  int
Minimum Value
  1000
Maximum Value
  8000
Permissions
  Read Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "echosounder: hfmchirpbw int 0 }
{"Command": "SetValue", "Arguments": "echosounder: hfmchirpbw int 8000
0 }
Return:
{"echosounder:hfmchirpbw": value}
```



echosounder:hfmchirplength

```
Description:
  HFM chirp length. Default value: 0.032.
Data Type
  float
Minimum Value
  0.1
Maximum Value
   0.01
Permissions
   Read Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "echosounder: hfmchirplength float
0 }
{"Command": "SetValue", "Arguments": "echosounder: hfmchirplength float
0.01 0 }
Return:
{"echosounder:hfmchirplength": value}
```



echosounder:timeout

```
Description:
    Echo sounder timeout. Default value: 10.

Data Type
    float

Minimum Value
    1

Maximum Value
    60

Permissions
    Read Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "echosounder: timeout float 0 }
{"Command": "SetValue", "Arguments": "echosounder: timeout float 60 0 }

Return:
{"echosounder: timeout": value}
```



echosounder:speedofsound

```
Description:
  Speed of sound. Default value: 1500.
Data Type
  float
Minimum Value
  300
Maximum Value
  2000
Permissions
   Read Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "echosounder: speedofsound float 0
}
{"Command": "SetValue", "Arguments": "echosounder: speedofsound float
2000 0 }
Return:
{"echosounder:speedofsound": value}
```



transponder:mode

```
Description:
    Transponder modes of operation. Default value: 0 = Off.
Data Type
    int

Minimum Value
    0
Maximum Value
    1

Permissions
    Read Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "transponder: mode int 0 }
{"Command": "SetValue", "Arguments": "transponder: mode int 1 0 }

Return:
{"transponder: mode": value}
```



transponder:carrier

```
Description:
  Transponder carrier frequency. Default value: 8087.
Data Type
  float
Minimum Value
  45000
Maximum Value
  5000
Permissions
   Read Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "transponder: carrier float 0 }
{"Command": "SetValue", "Arguments": "transponder: carrier float 5000 0
}
Return:
{"transponder:carrier": value}
```



transponder:detecttonef

```
Description:
  Detect tone frequency. Default value: 1997.
Data Type
  float
Minimum Value
  -5000
Maximum Value
  5000
Permissions
  Read Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "transponder: detecttonef float 0
}
{"Command": "SetValue", "Arguments": "transponder: detecttonef float
5000 0 }
Return:
{"transponder:detecttonef": value}
```



transponder:detecttonelength

```
Description:
   Detect tone length. Default value: 0.032.
Data Type
  float
Minimum Value
  0.01
Maximum Value
   0.1
Permissions
   Read Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "transponder: detecttonelength
float 0 }
{"Command": "SetValue", "Arguments": "transponder: detecttonelength
float 0.1 0 }
Return:
{"transponder:detecttonelength": value}
```



transponder:turnaroundtime

```
Description:
  Turnaround time. Default value: 0.116.
Data Type
  float
Minimum Value
  0.01
Maximum Value
Permissions
   Read Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "transponder: turnaroundtime float
0 }
{"Command": "SetValue", "Arguments": "transponder: turnaroundtime float
5 0 }
Return:
{"transponder:turnaroundtime": value}
```



transponder:respondtonef

```
Description:
  Respond tone frequency. Default value: 1251.
Data Type
  float
Minimum Value
  -5000
Maximum Value
  5000
Permissions
   Read Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "transponder: respondtonef float 0
}
{"Command": "SetValue", "Arguments": "transponder: respondtonef float
5000 0 }
Return:
{"transponder:respondtonef": value}
```



transponder:respondtonelength

```
Description:
  Respond tone length. Default value: 0.032.
Data Type
  float
Minimum Value
  0.01
Maximum Value
  0.1
Permissions
  Read Write
JSON API Syntax:
{"Command": "GetValue", "Arguments": "transponder: respondtonelength
float 0 }
{"Command": "SetValue", "Arguments": "transponder: respondtonelength
float 0.1 0 }
Return:
{"transponder:respondtonelength": value}
```



transponder:timeout

```
Description:
    Transponder timeout. Default value: 10.

Data Type
    float

Minimum Value
    1

Maximum Value
    60

Permissions
    Read Write

JSON API Syntax:
{"Command":"GetValue", "Arguments":"transponder:timeout float 0 }
{"Command":"SetValue", "Arguments":"transponder:timeout float 60 0 }

Return:
{"transponder:timeout": value}
```



pinger:mode

```
Description:
    Pinger mode. Default value: 0 = Off.
Data Type
    int

Minimum Value
    0
Maximum Value
    1

Permissions
    Read Write

JSON API Syntax:
{"Command":"GetValue","Arguments":"pinger:mode int 0 }
{"Command":"SetValue","Arguments":"pinger:mode int 1 0 }

Return:
{"pinger:mode": value}
```



pinger:carrier



pinger:pingtone

```
Description:
    Ping tone frequency. Default value: -1000.

Data Type
    float

Minimum Value
    -5000

Maximum Value
    5000

Permissions
    Read Write

JSON API Syntax:
{"Command": "GetValue", "Arguments": "pinger: pingtone float 0 }
{"Command": "SetValue", "Arguments": "pinger: pingtone float 5000 0 }

Return:
{"pinger: pingtone": value}
```



pinger:tonelength



24 Appendix A

24.1 The Acoustic Message Header

Every acoustic packet contains a header packet. Some types of acoustic packets are only a header, while others contain a subsequent payload packet. bits Field

Table 24.1: Header packet format

Bits	Field	Purpose	Format
0-7	Message Type	Identify between Packet, Packet with payload, rang- ing etc.	8 Bit MessageID
		MessageIDs	
		0 - Data 128 -Range Response	
		129 -Range Request 130 -Status	
8-15	SenderID	ID of the transmitting modem	0x0 – 0xfe - ID 0xff Broadcast
16-23	ReceiverID	The intended ID of the destination receiver.	0x0 – 0xfe - ID 0xff = Broad- cast message
24-31	TxPower	The transmitted scale factor as entered by the transmitting modem	Transmit power level as a Q8 scale value
32-47	PayloadInfo	If the present message does not contain a payload, then this field is 0. If a payload follows, the bits are assembled according to the payloadinfo fields de-	See Section 24.2
		scribed below.	



24.2 Payload Structure

If header bytes 4 and 5 are not zero, modulated payload data will immediately follow the modulated header data. The payload is described by the 16 bits in the payload info field of the header as follows:

Table 24.2: Header Byte 4

7	6	5	4	3	2	1	0
Plen7	Plen6	Plen5	Plen4	Plen3	Plen2	Plen1	Plen0

Table 24.3: Header Byte 5

15	14	13	12	11	10	9	8
Mod4	Mod3	Mod2	Mod1	Mod0	Stream	Plen9	Plen8

The length of the payload in bytes is set by the 10 bits of the Plen field. Although the field contains 10 bits, the payload size is capped by the software to a maximum of 256 bytes. Bits 11-15 of byte 5 of the header contain the modulation employed for the payload. Popoto uses the following enumerated modulations:

Table 24.4: Modulation Types (Mod Values)

Modulation Bitfield		Modulation Scheme	Data Rate	
	0	Frequency Hopped FSK	80 bps	
	1	Phase Shift Keying	5120 bps	
	2	Phase Shift Keying	2560 bps	
	3	Phase Shift Keying	1280 bps	
	4	Phase Shift Keying	640 bps	
	5	Phase Shift Keying	10240(uncoded) bps	

When large files are transmitted, it is more efficient to transfer the file in streaming mode. When streaming mode is invoked, the bit 10, of header byte 5 is set to indicate streaming mode. In streaming mode, the payload length Plen indicates the number of 255 byte frames which follow before another header transmission. All 255 byte packet remainders are handled by the software automatically.

- 25 Appendix B
- 25.1 Assembly Drawings

